


THANK YOU FOR PURCHASING. THIS IS THE INSTALLATION MANUAL OF WALD FRONT BUMPER FOR MERCEDES-BENZ W219 CLS-CLASS.

- ATTENTION**
- ※ NO RETURNS CAN BE ACCEPTED BECAUSE OF IMPROPER INSTALLATION OR PAINTING.
  - ※ CHECK THE FITMENT, AND ADJUST ALL THE DETAILS BEFORE PAINTING.
  - We assume no responsibility for any damage resulting from improper installation, painting, modification and any cut wound in unsealing.
  - Contact the car dealer when you have any question in removing OEM parts.
  - During all the installation process, use parking brake and stop the engine completely.
  - Use rasps or sandpapers to fit the products to the body if there is an individual difference.
  - The product is made of FRP. Handle with care. Do not give the excessive force. Gradually fix the bolts and nuts by checking the fitment and balance of the installation.
  - After making a hole on the body, make the corrosion treatment on it.
  - Check the fitment, and adjust all the details of the fitment steady and proper. Please check the fitment and all the details regularly, fix the bolts and nuts as necessary.
  - The instruction of painting is just our recommendation, please paint it as you like.
  - ※ PLEASE BE AWARE OF:
    - You may lose the warranty and all the services from the car maker, because of replacing OEM parts.
    - Reduced road clearance may cause inconvenience in using parking curbs and garage jack.
    - FRP, ABS and PPE products are slightly weaker than OEM parts in crashes.
    - The product may not match the body and OEM color perfectly.

	PARTS	QUANTITIES
FRONT SPOILER	FRONT SPOILER	1
	TAPPING SCREWS (M4 x 16)	6
SIDE STEP	SIDE STEPS	1 SET
REAR SKIRT	REAR SKIRT	1
	TAPPING SCREWS (M4 x 16)	6
TRUNK SPOILER	TRUNK SPOILER	1

Use caulking glue to fill the gap between the product and the body.

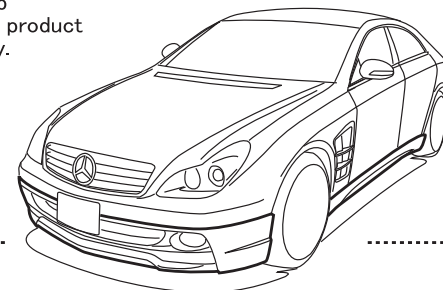

Please purchase double sided tape, primer and caulking glue at auto accessory shop or hardware store.

Completely degrease and paint primer on all the installation positions to enhance the viscosity of double sided tape. Use dryer to warm double sided tape to enhance the viscosity in low temperature. Keep the car in a dry condition more than 24 hours after gluing. Do not wash the car during this time.

## FRONT SPOILER

**[BEFORE PAINTING]**

- 1) Remove OEM license plate bracket.
- 2) Temporarily install WALD Front Spoiler to the body.
- ※ Adjust the details of WALD Front Spoiler to fit the body by rasps or sandpapers.
- 3) Mark the installation positions on WALD Front Spoiler and the body according to the picture.
- 4) Use drill to make holes according to the marked positions.
- 5) Paint WALD Front Spoiler.

**[AFTER PAINTING]**

- 6) Temporarily fix the attached tapping screws to install WALD Front Spoiler to the body.
- 7) Check all the details of the fitment, then fix them.
- 8) Process OEM license plate bracket as necessary.

Labels: LICENSE PLATE, OEM LICENSE PLATE BRACKET, ATTACHED TAPPING SCREW.

**HOW TO PROCESS OEM LICENSE PLATE BRACKET (STEP 8)**

Cut here.

- ATTENTION**
- ※ MORE THAN 2 TECHNICIANS ARE NECESSARY IN THIS WORK.
  - ※ DURING ALL THE INSTALLATION PROCESS, PLEASE BE CAREFUL NOT TO DAMAGE THE BODY.
  - ※ MARK THE INSTALLATION POSITIONS BY CHECKING THE FITMENT AND USE DRILL TO MAKE HOLES.
  - ※ DEGREASE ALL THE INSTALLATION POSITIONS, AND REMOVE THE BODY PROTECTION COATING BEFORE THE INSTALLATION.

## SIDE STEP

**[BEFORE PAINTING]**

- 1) Temporarily install WALD Side Steps to the body.
- 2) Mark the installation positions on WALD Side Steps and the body according to the picture.
- 3) Use drill to make holes according to the marked positions.
- 4) Paint WALD Side Steps.

**[AFTER PAINTING]**

- 5) Put double sided tape on WALD Side Steps according to the picture, then fold the both ends of release paper.
- 6) Temporarily fix OEM clips to install WALD Side Steps to the body.
- 7) Check all the details of the fitment, then fix them and remove release paper.

Labels: OEM CLIP, DOUBLE SIDED TAPE, WALD SIDE STEP.

**両面テープ部断面図**

- ATTENTION**
- ※ MORE THAN 2 TECHNICIANS ARE NECESSARY IN THIS WORK.
  - ※ DURING ALL THE INSTALLATION PROCESS, PLEASE BE CAREFUL NOT TO DAMAGE THE BODY.
  - ※ MARK THE INSTALLATION POSITIONS BY CHECKING THE FITMENT AND USE DRILL TO MAKE HOLES.
  - ※ DEGREASE ALL THE INSTALLATION POSITIONS, AND REMOVE THE BODY PROTECTION COATING BEFORE THE INSTALLATION.

## REAR SKIRT

**[BEFORE PAINTING]**

- 1) Temporarily install WALD Rear Skirt to the body.
- ※ Adjust the details of WALD Rear Skirt to fit the body by rasps or sandpapers.
- 2) Mark the installation positions on WALD Rear Skirt and the body according to the picture.
- 3) Use drill to make holes according to the marked positions.
- 4) Paint WALD Rear Skirt.

**[AFTER PAINTING]**

- 5) Temporarily fix the attached tapping screws to install WALD Rear Skirt to the body.
- 6) Check all the details of the fitment, then fix them.

Labels: ATTACHED TAPPING SCREW.

**HOW TO INSTALL WALD REAR SKIRT (STEP 5)**

This indication is just our recommendation. Install it by checking the fitment.

380mm

- ATTENTION**
- ※ MORE THAN 2 TECHNICIANS ARE NECESSARY IN THIS WORK.
  - ※ DURING ALL THE INSTALLATION PROCESS, PLEASE BE CAREFUL NOT TO DAMAGE THE BODY.
  - ※ MARK THE INSTALLATION POSITIONS BY CHECKING THE FITMENT AND USE DRILL TO MAKE HOLES.
  - ※ DEGREASE ALL THE INSTALLATION POSITIONS, AND REMOVE THE BODY PROTECTION COATING BEFORE THE INSTALLATION.

## TRUNK SPOILER

Labels: RELEASE PAPER, DOUBLE SIDED TAPE.

**[BEFORE PAINTING]**

- 1) Put WALD Trunk Spoiler on the body, then use masking tape to mark the installation position.
- 2) Paint WALD Trunk Spoiler.

**[AFTER PAINTING]**

- 3) Put double sided tape on WALD Trunk Spoiler, then fold the both ends of release paper.
- 4) Temporarily put WALD Trunk Spoiler on the body according to the marked position.
- 5) Check all the details of the fitment, then remove release paper.

- ATTENTION**
- ※ MORE THAN 2 TECHNICIANS ARE NECESSARY IN THIS WORK.
  - ※ DURING ALL THE INSTALLATION PROCESS, PLEASE BE CAREFUL NOT TO DAMAGE THE BODY.
  - ※ DEGREASE ALL THE INSTALLATION POSITIONS, AND REMOVE THE BODY PROTECTION COATING BEFORE THE INSTALLATION.