

# Mercedes Benz E-class W211

WALD SPORTS LINE  
BLACK BISON EDITION

INSTALLATION MANUAL  
**WALD**  
Sportliche Autoausrüstung WALD.International

THANK YOU FOR PURCHASING. THIS IS THE INSTALLATION MANUAL OF WALD FRONT BUMPER FOR MERCEDES-BENZ W211 E-CLASS.

## ATTENTION




- ※ NO RETURNS CAN BE ACCEPTED BECAUSE OF IMPROPER INSTALLATION OR PAINTING.
- ※ CHECK THE FITMENT, AND ADJUST ALL THE DETAILS BEFORE PAINTING.
- We assume no responsibility for any damage resulting from improper installation, painting, modification and any cut wound in unsealing.
- Contact the car dealer when you have any question in removing OEM parts.
- During all the installation process, use parking brake and stop the engine completely.
- Use rasps or sandpapers to fit the products to the body if there is an individual difference.
- The product is made of FRP. Handle with care. Do not give the excessive force.
- Gradually fix the bolts and nuts by checking the fitment and balance of the installation.
- After making a hole on the body, make the corrosion treatment on it.
- Check the fitment, and adjust all the details of the fitment steady and proper.
- Please check the fitment and all the details regularly, fix the bolts and nuts as necessary.
- The instruction of painting is just our recommendation, please paint it as you like.
- ※ PLEASE BE AWARE OF:
  - You may lose the warranty and all the services from the car maker, because of replacing OEM parts.
  - Reduced road clearance may cause inconvenience in using parking curbs and garage jack.
  - FRP, ABS and PPE products are slightly weaker than OEM parts in crashes.
  - The product may not match the body and OEM color perfectly.

Please purchase double sided tape, primer and caulking glue at auto accessory shop or hardware store.

Completely degrease and paint primer on all the installation positions to enhance the viscosity of double sided tape.  
Use dryer to warm double sided tape to enhance the viscosity in low temperature.  
Keep the car in a dry condition more than 24 hours after gluing.  
Do not wash the car during this time.

|              | PARTS        | QUANTITIES |
|--------------|--------------|------------|
| FRONT BUMPER | FRONT BUMPER | 1          |
|              | MESHERS      | 1 SET      |

Use caulking glue to fill the gap between the product and the body.

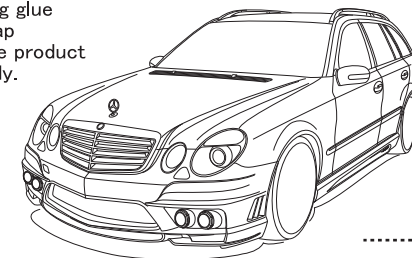

## FRONT BUMPER

### [BEFORE PAINTING]


- 1) Remove OEM front bumper according to the Mercedes-Benz service manual.
  - 2) Relocate OEM bumper support to WALD Front Bumper.
  - 3) Temporarily install WALD Front Bumper to the body.
- ※ Adjust the details of WALD Front Bumper to fit the body by rasps or sandpapers.
- 4) Paint WALD Front Bumper according to the picture.

### [AFTER PAINTING]

- 5) Install the fog lamp kit to WALD Front Bumper.
- ※ Make sure the fog lamp kit is fine to work before the installation.
- 6) Use caulking glue to install the attached meshes to WALD Front Bumper from the rear.
  - 7) Relocate OEM license plate bracket to WALD Front Bumper.
  - 8) Temporarily fix OEM bolts, brackets and tapping screws to install WALD Front Bumper to the body.
  - 9) Check all the details of the fitment, then fix them.


### ■ HOW TO INSTALL THE ATTACHED MESHERS (STEP 6)

Use pins and caulking glue to install the attached meshes to WALD Front Bumper from the rear.

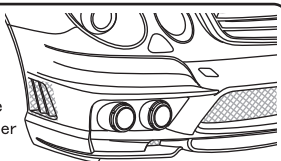


※ WALD SHOWCAR IS PAINTED LIKE THE PICTURE (STEP 4)

MATTE BLACK

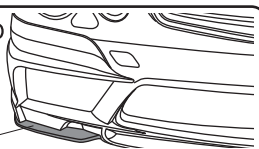

### ■ HOW TO INSTALL OEM BRACKETS (STEP 8)

Use OEM brackets to install WALD Front Bumper.  
(Exactly same with OEM installation process)

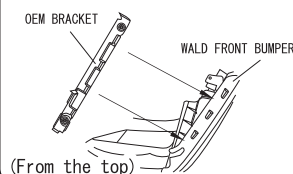

OEM BOLT



OEM BOLT

OEM BRACKET

OEM TAPPING SCREW

■ Fit the gaps of WALD Front Bumper (A) and OEM parts (B).

(Inside of WALD Front Bumper) (A)

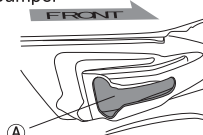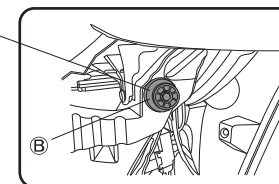

## ATTENTION

※ MORE THAN 2 TECHNICIANS ARE NECESSARY IN THIS WORK.  
DURING ALL THE INSTALLATION PROCESS, PLEASE BE CAREFUL NOT TO DAMAGE THE BODY.

# Mercedes Benz E-class W211

WALD SPORTS LINE  
BLACK BISON EDITION

INSTALLATION MANUAL  
**WALD**  
Sportliche Autoausrüstung WALD.International

THANK YOU FOR PURCHASING. THIS IS THE INSTALLATION MANUAL OF WALD SIDE STEPS FOR MERCEDES-BENZ W211 E-CLASS.

## ATTENTION



- ※ NO RETURNS CAN BE ACCEPTED BECAUSE OF IMPROPER INSTALLATION OR PAINTING.
- ※ CHECK THE FITMENT, AND ADJUST ALL THE DETAILS BEFORE PAINTING.
- We assume no responsibility for any damage resulting from improper installation, painting, modification and any cut wound in unsealing.
- Contact the car dealer when you have any question in removing OEM parts.
- During all the installation process, use parking brake and stop the engine completely.
- Use rasps or sandpapers to fit the products to the body if there is an individual difference.
- The product is made of FRP. Handle with care. Do not give the excessive force.
- Gradually fix the bolts and nuts by checking the fitment and balance of the installation.
- After making a hole on the body, make the corrosion treatment on it.
- Check the fitment, and adjust all the details of the fitment steady and proper.
- Please check the fitment and all the details regularly, fix the bolts and nuts as necessary.
- The instruction of painting is just our recommendation, please paint it as you like.
- ※ PLEASE BE AWARE OF:
- You may lose the warranty and all the services from the car maker, because of replacing OEM parts.
- Reduced road clearance may cause inconvenience in using parking curbs and garage jack.
- FRP, ABS and PPE products are slightly weaker than OEM parts in crashes.
- The product may not match the body and OEM color perfectly.


Please purchase double sided tape, primer and caulking glue at auto accessory shop or hardware store.

Completely degrease and paint primer on all the installation positions to enhance the viscosity of double sided tape.  
Use dryer to warm double sided tape to enhance the viscosity in low temperature.  
Keep the car in a dry condition more than 24 hours after gluing.  
Do not wash the car during this time.

|           | PARTS      | QUANTITIES |
|-----------|------------|------------|
| SIDE STEP | SIDE STEPS | 1 SET      |



Use caulking glue to fill the gap between the product and the body.

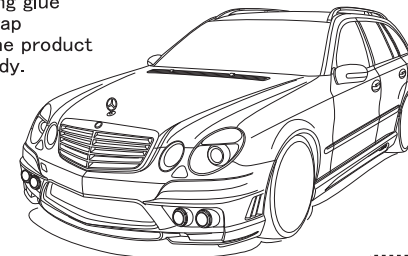

## SIDE STEP



### [BEFORE PAINTING]

- 1) Remove OEM side steps according to the Mercedes-Benz service manual.
- 2) Temporarily install WALD Side Steps to the body.
- ※ Adjust the details of WALD Side Steps to fit the body by rasps or sandpapers.
- 3) Paint WALD Side Steps according to the picture.

### [AFTER PAINTING]

- 4) Completely degrease the installation positions of WALD Side Steps.
- 5) Temporarily fix OEM clips and use caulking glue to install WALD Side Steps to the body.
- 6) Check all the details of the fitment, then fix them.
- 7) Use masking tape to fix WALD Side Steps, leave them till completely fixed.

※WALD SHOWCAR IS PAINTED LIKE THE PICTURE (STEP 3)

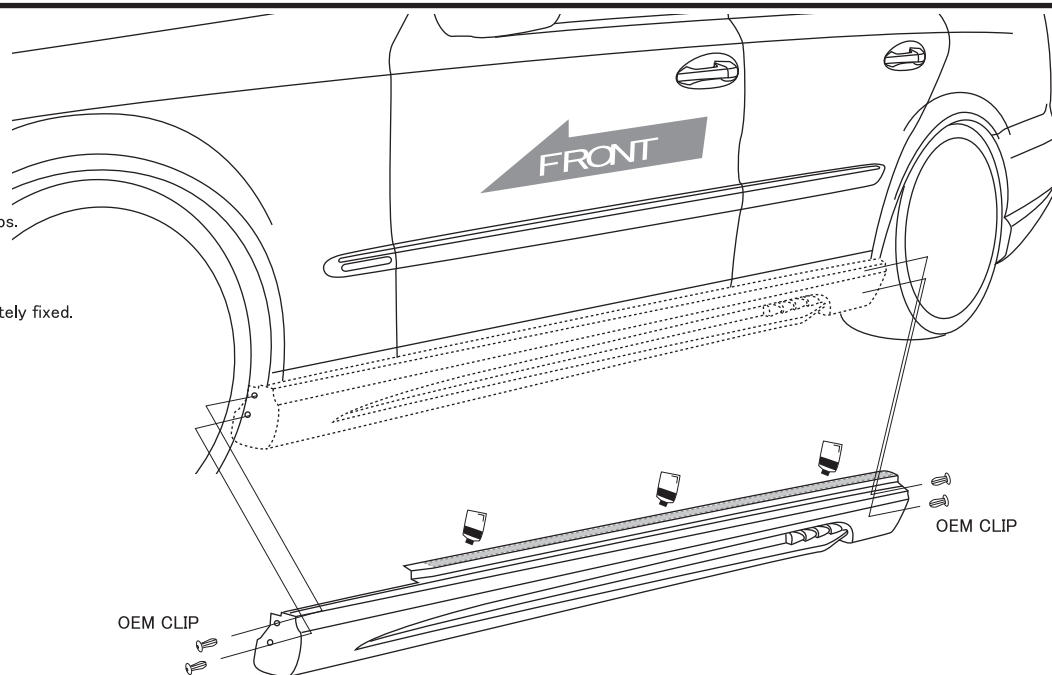

## ATTENTION

- ※MORE THAN 2 TECHNICIANS ARE NECESSARY IN THIS WORK.
- DURING ALL THE INSTALLATION PROCESS, PLEASE BE CAREFUL NOT TO DAMAGE THE BODY.
- ※DEGREASE ALL THE INSTALLATION POSITIONS, AND REMOVE THE BODY PROTECTION COATING BEFORE THE INSTALLATION.



WALD INTERNATIONAL

WALD INTERNATIONAL

ADD: 10-13 KYOGUCHI-CHO, TAKATSUKI, OSAKA, JAPAN

ZIP: 569-0072 TEL: (81)-72-673-3000 FAX: (81)-72-673-3003

WALD INTERNATIONAL

# Mercedes Benz E-class W211

WALD SPORTS LINE  
BLACK BISON EDITION

INSTALLATION MANUAL  
**WALD**  
Sportliche Autoausrüstung WALD.International

THANK YOU FOR PURCHASING. THIS IS THE INSTALLATION MANUAL OF FOG LAMP KIT OF WALD FRONT BUMPER FOR MERCEDES-BENZ W211 E-CLASS.

## ATTENTION



- ※ NO RETURNS CAN BE ACCEPTED BECAUSE OF IMPROPER INSTALLATION OR PAINTING.
- ※ CHECK THE FITMENT, AND ADJUST ALL THE DETAILS BEFORE PAINTING.
- We assume no responsibility for any damage resulting from improper installation, painting, modification and any cut wound in unsealing.
- Contact the car dealer when you have any question in removing OEM parts.
- During all the installation process, use parking brake and stop the engine completely.
- Use rasps or sandpapers to fit the products to the body if there is an individual difference.
- The product is made of FRP. Handle with care. Do not give the excessive force.
- Gradually fix the bolts and nuts by checking the fitment and balance of the installation.
- After making a hole on the body, make the corrosion treatment on it.
- Check the fitment, and adjust all the details of the fitment steady and proper.
- Please check the fitment and all the details regularly, fix the bolts and nuts as necessary.
- The instruction of painting is just our recommendation, please paint it as you like.
- ※ PLEASE BE AWARE OF:
- You may lose the warranty and all the services from the car maker, because of replacing OEM parts.
- Reduced road clearance may cause inconvenience in using parking curbs and garage jack.
- FRP, ABS and PPE products are slightly weaker than OEM parts in crashes.
- The product may not match the body and OEM color perfectly.


Please purchase double sided tape, primer and caulking glue at auto accessory shop or hardware store.

Completely degrease and paint primer on all the installation positions to enhance the viscosity of double sided tape.  
Use dryer to warm double sided tape to enhance the viscosity in low temperature.  
Keep the car in a dry condition more than 24 hours after gluing.  
Do not wash the car during this time.

|              | PARTS                  | QUANTITIES |
|--------------|------------------------|------------|
| FOG LAMP KIT | FOG LAMPS              | 2 SETS     |
|              | FOG LAMP COVERS        | 1 SET      |
|              | BRACKETS               | 4          |
|              | BOLTS (M5 x 15) & NUTS | 20 SETS    |



Use caulking glue to fill the gap between the product and the body.

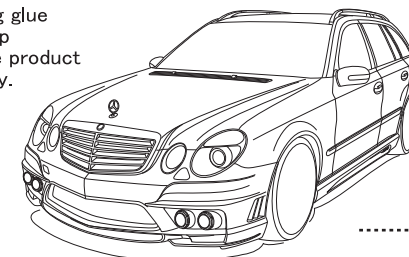

## FOG LAMP KIT


### [BEFORE PAINTING]

- 1) Temporarily fix the attached bolts and nuts to install the fog lamp covers to WALD Front Bumper.
- ※ Adjust the details of WALD Front Bumper and the fog lamp covers to fit by rasps or sandpapers.
  - ※ Make sure the fog lamp kit is fine to work before the installation.
- 2) Temporarily fix the attached bolts and nuts to install the fog lamps to the attached brackets.
- ※ Match each direction before the installation.
  - ※ Adjust the details of WALD Front Bumper and the attached brackets to fit by rasps or sandpapers.
- 3) Prepare to connect the fog lamps.
  - 4) Paint the fog lamp covers according to the picture.

### [AFTER PAINTING]


- 5) Temporarily fix the attached bolts and nuts to install the fog lamps and fog lamp covers to WALD Front Bumper.
- 6) Check all the details of the fitment and optical axis, then fix them.
- 7) Use relay harness with remote controller kit to turn on the LED rings and fog lamps separately.

※WALD SHOWCAR IS PAINTED  
LIKE THE PICTURE (STEP 4)



## ATTENTION

- ※DURING ALL THE INSTALLATION PROCESS, PLEASE BE CAREFUL NOT TO DAMAGE THE BODY.
- ※REMOVE THE BATTERY BEFORE ALL THE WIRING WORKS.
- ※MAKE SURE THE FOG LAMPS ARE FINE TO WORK BEFORE THE INSTALLATION.

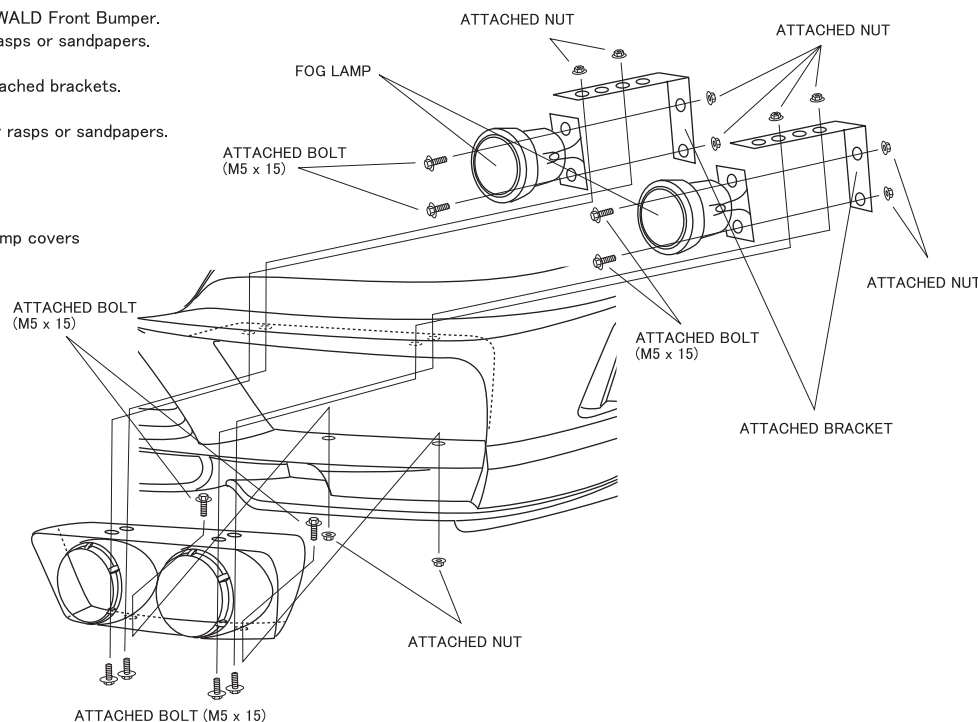

WALD INTERNATIONAL

# Mercedes Benz E-class W211

WALD SPORTS LINE  
BLACK BISON EDITION

INSTALLATION MANUAL  
**WALD**  
Sportliche Autoausrüstung WALD.International

THANK YOU FOR PURCHASING. THIS IS THE INSTALLATION MANUAL OF LED NIGHT SYSTEM INSERT ADAPTERS OF WALD FRONT BUMPER FOR MERCEDES-BENZ W211 E-CLASS.

## ATTENTION



- ※ NO RETURNS CAN BE ACCEPTED BECAUSE OF IMPROPER INSTALLATION OR PAINTING.
- ※ CHECK THE FITMENT, AND ADJUST ALL THE DETAILS BEFORE PAINTING.
- We assume no responsibility for any damage resulting from improper installation, painting, modification and any cut wound in unsealing.
- Contact the car dealer when you have any question in removing OEM parts.
- During all the installation process, use parking brake and stop the engine completely.
- Use rasps or sandpapers to fit the products to the body if there is an individual difference.
- The product is made of FRP. Handle with care. Do not give the excessive force.
- Gradually fix the bolts and nuts by checking the fitment and balance of the installation.
- After making a hole on the body, make the corrosion treatment on it.
- Check the fitment, and adjust all the details of the fitment steady and proper.
- Please check the fitment and all the details regularly, fix the bolts and nuts as necessary.
- The instruction of painting is just our recommendation, please paint it as you like.
- ※ PLEASE BE AWARE OF:
  - You may lose the warranty and all the services from the car maker, because of replacing OEM parts.
  - Reduced road clearance may cause inconvenience in using parking curbs and garage jack.
  - FRP, ABS and PPE products are slightly weaker than OEM parts in crashes.
  - The product may not match the body and OEM color perfectly.

Please purchase double sided tape, primer and caulking glue at auto accessory shop or hardware store.

Completely degrease and paint primer on all the installation positions to enhance the viscosity of double sided tape.

Use dryer to warm double sided tape to enhance the viscosity in low temperature.


Keep the car in a dry condition more than 24 hours after gluing.

Do not wash the car during this time.

|                                    | PARTS                       | QUANTITIES |
|------------------------------------|-----------------------------|------------|
| LED NIGHT SYSTEM<br>INSERT ADAPTER | LED LAMPS (LIGHT REDUCTION) | 1 SET      |
|                                    | INSERT ADAPTERS             | 1 SET      |
|                                    | MESHES                      | 1 SET      |
|                                    | TAPPING SCREWS (M4 x 6)     | 12         |
|                                    | RESISTORS (25W, 10Ω)        | 2          |



Use caulking glue to fill the gap between the product and the body.

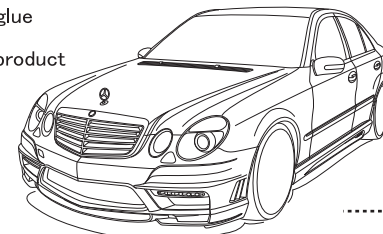

## LED NIGHT SYSTEM INSERT ADAPTER

### [BEFORE PAINTING]

- 1) Remove WALD Front Bumper according to the installation manual.
- 2) Temporarily put the insert adapters on OEM front bumper, then make holes (3mm) on them to install the attached tapping screws.
- ※ Adjust the details of the insert adapters to fit WALD Front Bumper by rasps or sandpapers.
- 3) Remove the insert adapters, then expand the holes of WALD Front Bumper from 3mm to 5mm.
- ※ Do not expand the holes of the insert adapters.
- 4) Temporarily install the LED lamps and insert adapters to WALD Front Bumper.
- ※ Adjust the details of the insert adapters to fit the LED lamps by rasps or sandpapers.
- ※ Make sure the LED lamps are fine to work before the installation.
- 5) Make holes (3mm) on the attached brackets and insert adapters.
- ※ Make corrosion treatment on the holes.
- 6) Prepare to connect the LED lamps with the attached resistors.
- 7) Paint the insert adapters according to the picture.

### [AFTER PAINTING]

- 8) Use pins and caulking glue to install the attached meshes to the insert adapters from the rear.
- 9) Temporarily fix the attached tapping screws, brackets, bolts and use caulking glue to install the LED lamps and insert adapters to WALD Front Bumper.
- 10) Check all the details of the fitment, then fix them.



## ATTENTION

- ※ DURING ALL THE INSTALLATION PROCESS, PLEASE BE CAREFUL NOT TO DAMAGE THE BODY.
- ※ REMOVE THE BATTERY BEFORE ALL THE WIRING WORKS.
- ※ MAKE SURE THE FOG LAMPS ARE FINE TO WORK BEFORE THE INSTALLATION.

### ■ HOW TO INSTALL THE ATTACHED RESISTORS (STEP 6)


Connect the attached resistors to the harness of OEM fog lamps when the warning lamp is on.





※ Install the attached resistors away from the harness to prevent the heat of them.

### ■ HOW TO INSTALL THE ATTACHED MESHES (STEP 8)

Use pins and caulking glue to install the attached meshes to the insert adapters from the rear.

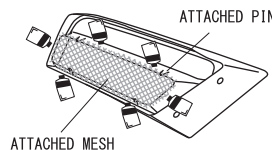

※ WALD SHOWCAR IS PAINTED LIKE THE PICTURE (STEP 7)  
Paint it in matte black.

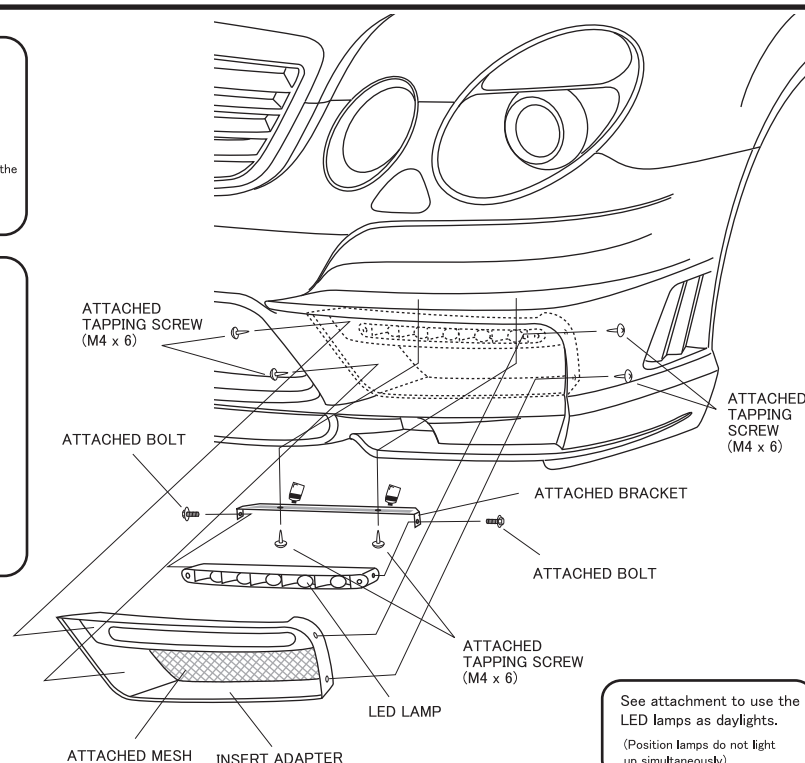

See attachment to use the LED lamps as daylight.  
(Position lamps do not light up simultaneously)

# Mercedes Benz E-class W211

WALD SPORTS LINE  
BLACK BISON EDITION

INSTALLATION MANUAL  
**WALD**  
Sportliche Autoausrüstung WALD.International

THANK YOU FOR PURCHASING. THIS IS THE INSTALLATION MANUAL OF WALD REAR BUMPER FOR MERCEDES-BENZ W211 E-CLASS.

## ATTENTION



- ※ NO RETURNS CAN BE ACCEPTED BECAUSE OF IMPROPER INSTALLATION OR PAINTING.
- ※ CHECK THE FITMENT, AND ADJUST ALL THE DETAILS BEFORE PAINTING.
- We assume no responsibility for any damage resulting from improper installation, painting, modification and any cut wound in unsealing.
- Contact the car dealer when you have any question in removing OEM parts.
- During all the installation process, use parking brake and stop the engine completely.
- Use rasps or sandpapers to fit the products to the body if there is an individual difference.
- The product is made of FRP. Handle with care. Do not give the excessive force.
- Gradually fix the bolts and nuts by checking the fitment and balance of the installation.
- After making a hole on the body, make the corrosion treatment on it.
- Check the fitment, and adjust all the details of the fitment steady and proper.
- Please check the fitment and all the details regularly, fix the bolts and nuts as necessary.
- The instruction of painting is just our recommendation, please paint it as you like.
- ※ PLEASE BE AWARE OF:
  - You may lose the warranty and all the services from the car maker, because of replacing OEM parts.
  - Reduced road clearance may cause inconvenience in using parking curbs and garage jack.
  - FRP, ABS and PPE products are slightly weaker than OEM parts in crashes.
  - The product may not match the body and OEM color perfectly.

Please purchase double sided tape, primer and caulking glue at auto accessory shop or hardware store.

Completely degrease and paint primer on all the installation positions to enhance the viscosity of double sided tape.

Use dryer to warm double sided tape to enhance the viscosity in low temperature.


Keep the car in a dry condition more than 24 hours after gluing.

Do not wash the car during this time.

|             | PARTS                    | QUANTITIES |
|-------------|--------------------------|------------|
| REAR BUMPER | REAR BUMPER              | 1          |
|             | LED LAMP                 | 1          |
|             | NUTS (M4)                | 2          |
|             | BOLTS (M6 x 12) & NUTS   | 2 SETS     |
|             | TAPPING SCREWS (M4 x 16) | 2          |
|             | MESHES                   | 1 SET      |



Use caulking glue to fill the gap between the product and the body.

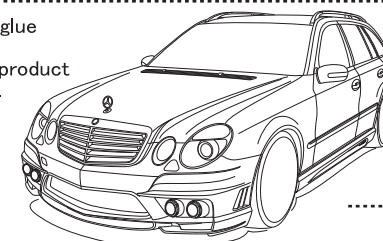

## REAR BUMPER

### [BEFORE PAINTING]

- 1) Remove OEM rear bumper according to the Mercedes-Benz service manual.
- 2) Relocate OEM bumper support to WALD Rear Bumper.
- 3) Temporarily install WALD Rear Bumper to the body.
- ※ Adjust the details of WALD Rear Bumper to fit the body by rasps or sandpapers.
- 4) Paint WALD Rear Bumper according to the picture.

### [AFTER PAINTING]

- 5) Install the attached LED lamp and meshes to the body.
- ※ Make sure the attached LED lamp is fine to work before the installation.
- 6) Temporarily fix all the U-type nuts, tapping screws, bolts and nuts to install WALD Rear Bumper to the body.
- 7) Check all the details of the fitment, then fix them.


### ■ HOW TO INSTALL THE ATTACHED MESHES (STEP 5)

Use pins and caulking glue to install the attached meshes to WALD Rear Bumper from the rear.



### ※WALD SHOWCAR IS PAINTED LIKE THE PICTURE (STEP 4)

MATTE BLACK

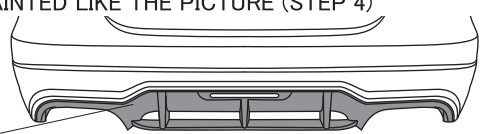


ATTENTION



※MORE THAN 2 TECHNICIANS ARE NECESSARY IN THIS WORK.  
DURING ALL THE INSTALLATION PROCESS, PLEASE BE CAREFUL NOT TO DAMAGE THE BODY.

### ■ HOW TO RELOCATE OEM BUMPER SUPPORT (STEP 2)

Use the attached tapping screws and caulking glue to install OEM bumper support and parts according to the picture.

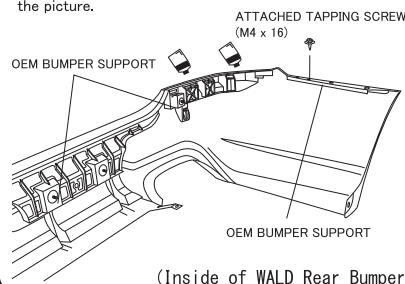

### ■ HOW TO INSTALL THE ATTACHED LED LAMP (STEP 5)

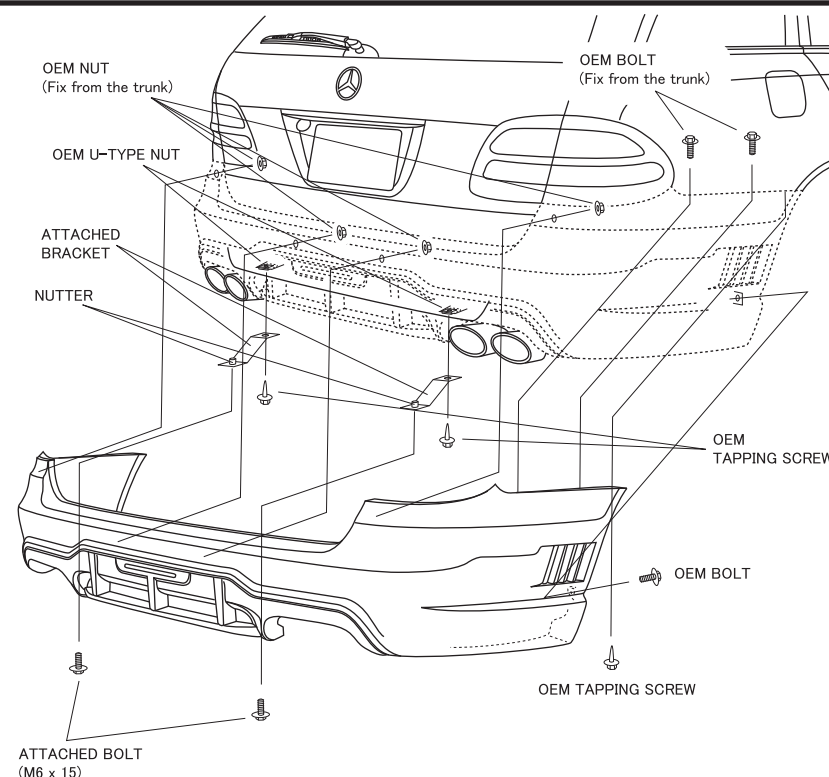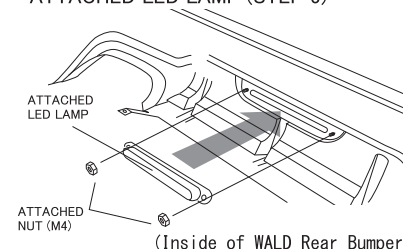

# Mercedes Benz W211 AMG E63

WALD SPORTS LINE  
BLACK BISON EDITION

INSTALLATION MANUAL  
**WALD**  
Sportliche Autoausrüstung WALD.International

THANK YOU FOR PURCHASING. THIS IS THE INSTALLATION MANUAL OF LED NIGHT SYSTEM INSERT ADAPTERS FOR MERCEDES-BENZ AMG E63 W211 E-CLASS.




- ※ NO RETURNS CAN BE ACCEPTED BECAUSE OF IMPROPER INSTALLATION OR PAINTING.
- ※ CHECK THE FITMENT, AND ADJUST ALL THE DETAILS BEFORE PAINTING.
- We assume no responsibility for any damage resulting from improper installation, painting, modification and any cut wound in unsealing.
- Contact the car dealer when you have any question in removing OEM parts.
- During all the installation process, use parking brake and stop the engine completely.
- Use rasps or sandpapers to fit the products to the body if there is an individual difference.
- The product is made of FRP. Handle with care. Do not give the excessive force.
- Gradually fix the bolts and nuts by checking the fitment and balance of the installation.
- After making a hole on the body, make the corrosion treatment on it.
- Check the fitment, and adjust all the details of the fitment steady and proper.
- Please check the fitment and all the details regularly, fix the bolts and nuts as necessary.
- The instruction of painting is just our recommendation, please paint it as you like.
- ※ PLEASE BE AWARE OF:
  - You may lose the warranty and all the services from the car maker, because of replacing OEM parts.
  - Reduced road clearance may cause inconvenience in using parking curbs and garage jack.
  - FRP, ABS and PPE products are slightly weaker than OEM parts in crashes.
  - The product may not match the body and OEM color perfectly.

Please purchase double sided tape, primer and caulking glue at auto accessory shop or hardware store.

Completely degrease and paint primer on all the installation positions to enhance the viscosity of double sided tape.  
Use dryer to warm double sided tape to enhance the viscosity in low temperature.  
Keep the car in a dry condition more than 24 hours after gluing.  
Do not wash the car during this time.

|                                    | PARTS                       | QUANTITIES |
|------------------------------------|-----------------------------|------------|
| LED NIGHT SYSTEM<br>INSERT ADAPTER | LED LAMPS (LIGHT REDUCTION) | 1 SET      |
|                                    | INSERT ADAPTERS             | 1 SET      |
|                                    | MESHES                      | 1 SET      |
|                                    | TAPPING SCREWS (M4 x 6)     | 12         |
|                                    | RESISTORS (25W, 10Ω)        | 2          |

Use caulking glue to fill the gap between the product and the body.

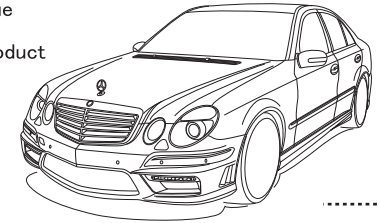

## LED NIGHT SYSTEM INSERT ADAPTER

### 【BEFORE PAINTING】

- 1) Remove OEM front bumper according to the installation manual.
- 2) Temporarily put the insert adapters on OEM front bumper, then make holes (3mm) on them to install the attached tapping screws.
- ※ Adjust the details of the insert adapters to fit OEM front bumper by rasps or sandpapers.
- ※ Cut OEM front bumper according to the picture.
- 3) Remove the insert adapters, then expand the holes of OEM front bumper from 3mm to 5mm.
- ※ Do not expand the holes of the insert adapters.
- 4) Temporarily install the LED lamps and insert adapters to OEM front bumper.
- ※ Adjust the details of the insert adapters to fit the LED lamps by rasps or sandpapers.
- ※ Make sure the LED lamps are fine to work before the installation.
- 5) Make holes (3mm) on the attached brackets and insert adapters.
- ※ Make corrosion treatment on the holes.
- 6) Prepare to connect the LED lamps with the attached resistors.
- 7) Paint the insert adapters according to the picture.


### 【AFTER PAINTING】

- 8) Use pins and caulking glue to install the attached meshes to the insert adapters from the rear.
- 9) Temporarily fix the attached tapping screws, brackets, bolts and use caulking glue to install the LED lamps and insert adapters to OEM front bumper.
- 10) Check all the details of the fitment, then fix them.

### ■ HOW TO CUT OEM FRONT BUMPER (STEP 2)


Cut OEM front bumper according to the picture.

(Inside of OEM front bumper)

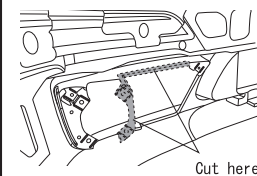


### ■ HOW TO INSTALL THE ATTACHED MESHES (STEP 8)

Use pins and caulking glue to install the attached meshes to the insert adapters from the rear.

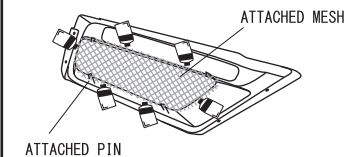


### ■ HOW TO INSTALL THE ATTACHED RESISTORS (STEP 6)

Connect the attached resistors to the harness of OEM fog lamps when the warning lamp is on.





### ※WALD SHOWCAR IS PAINTED LIKE THE PICTURE (STEP 7)

Paint it in matte black.



### ■ HOW TO INSTALL THE LED LAMPS (STEP 4, 5, 9)

Use pins and caulking glue to install the attached meshes to the insert adapters from the rear.

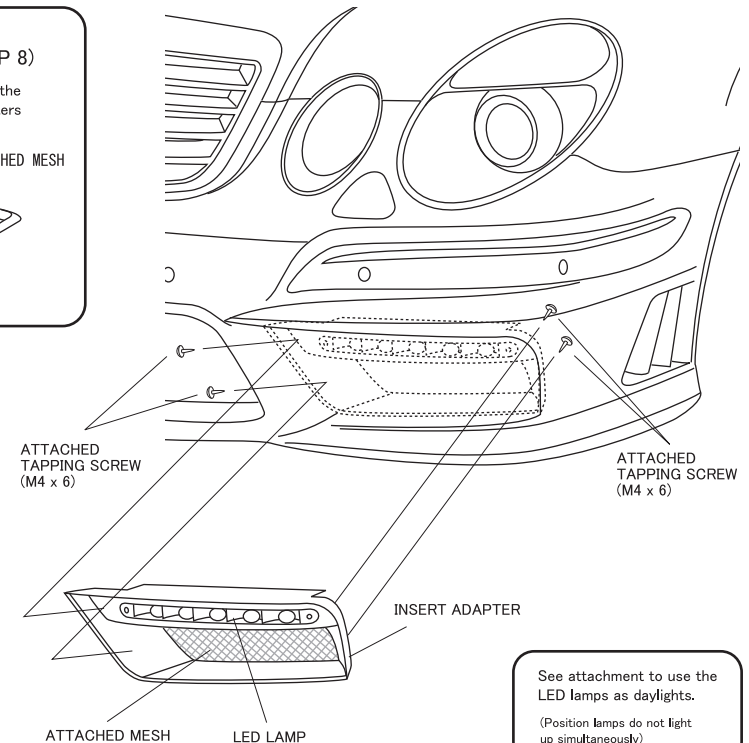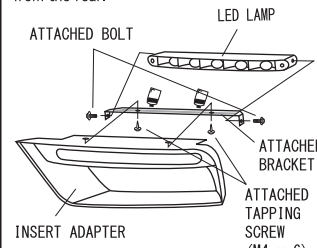

See attachment to use the LED lamps as daylight.

(Position lamps do not light up simultaneously)



### ATTENTION

- ※DURING ALL THE INSTALLATION PROCESS, PLEASE BE CAREFUL NOT TO DAMAGE THE BODY.
- ※REMOVE THE BATTERY BEFORE ALL THE WIRING WORKS.
- ※MAKE SURE THE FOG LAMPS ARE FINE TO WORK BEFORE THE INSTALLATION.