

THANK YOU FOR PURCHASING. THIS IS THE INSTALLATION MANUAL OF WALD FRONT BUMPER FOR MERCEDES-BENZ C218 CLS-CLASS.  
PLEASE READ THIS MANUAL CAREFULLY BEFORE THE INSTALLATION.

ATTENTION

※ NO RETURNS CAN BE ACCEPTED BECAUSE OF IMPROPER INSTALLATION OR PAINTING.

※ CHECK THE FITMENT, AND ADJUST ALL THE DETAILS BEFORE PAINTING.

■ We assume no responsibility for any damage resulting from improper installation, painting, modification and any cut wound in unsealing.

■ Contact the car dealer when you have any question in removing OEM parts.

■ During all the installation process, use parking brake and stop the engine completely.

■ Use rasps or sandpapers to fit the products to the body if there is an individual difference.

■ The product is made of FRP. Handle with care. Do not give the excessive force.

■ Gradually fix the bolts and nuts by checking the fitment and balance of the installation.

■ After making a hole on the body, make the corrosion treatment on it.

■ Check the fitment, and adjust all the details of the fitment steady and proper.

■ Please check the fitment and all the details regularly, fix the bolts and nuts as necessary.

■ The instruction of painting is just our recommendation, please paint it as you like.

※ PLEASE BE AWARE OF:

■ You may lose the warranty and all the services from the car maker, because of replacing OEM parts.


■ Reduced road clearance may cause inconvenience in using parking curbs and garage jack.

■ FRP, ABS and PPE products are slightly weaker than OEM parts in crashes.

■ The product may not match the body and OEM color perfectly.

	PARTS	QUANTITIES
FRONT BUMPER	FRONT BUMPER	1
	MESHES	1set
	LED LAMPS	1set
SIDE STEP	SIDE STEPS	1set
	TAPPING SCREWS (M4 x 16)	4
REAR BUMPER	REAR BUMPER	1
	MESH	1
	TAPPING SCREWS (M4 x 16)	2

Use caulking glue to fill the gap between the product and the body.

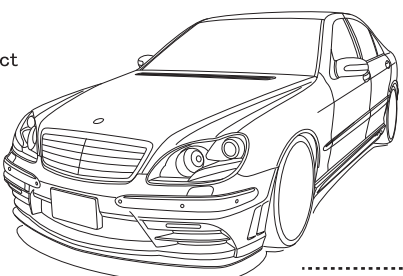

Please purchase double sided tape, primer and caulking glue at auto accessory shop or hardware store.

Completely degrease and paint primer on all the installation positions to enhance the viscosity of double sided tape.

Use dryer to warm double sided tape to enhance the viscosity in low temperature.Keep the car in a dry condition more than 24 hours after gluing.

Do not wash the car during this time.

FRONT BUMPER

【BEFORE PAINTING】

1) Remove OEM front bumper according to the Mercedes-Benz manual.

2) Temporarily install WALD Front Bumper to the body.

※ Adjust the details of WALD Front Bumper to fit the body by rasps or sandpapers.

3) Prepare to connect the attached LED lamp harness.

4) Paint WALD Front Bumper according to the picture.

■HOW TO INSTALL THE ATTACHED LED LAMPS (STEP 5)

(Inside of WALD Front Bumper)

ATTACHED BOLT

ATTACHED LED LAMP

■HOW TO INSTALL OEM BRACKETS (STEP 7)

Use OEM brackets to fix WALD Front Bumper. (Exactly same with OEM installation process)

(From the top)

OEM BRACKET

WALD FRONT BUMPER

■HOW TO INSTALL PTS (STEP 6)

Remove PTS and bases, then use caulking glue to fix them to WALD Front Bumper from the rear.

An incorrect installation of PTS may cause a malfunction.

Adjust the projections of PTS by processing WALD Front Bumper from the rear according to the picture.

■HOW TO INSTALL THE ATTACHED MESHES (STEP 5)

Use pins and caulking glue to install the attached meshes to WALD Front Bumper along the shape of the ducts from the rear.

ATTACHED MESH

■WALD SHOWCAR IS PAINTED LIKE THE PICTURE (STEP 4)

OEM LICENSE PLATE BRACKET

OEM TAPPING SCREW

OEM HEADLIGHT WASHER COVER

SIDE STEP

OEM TAPPING SCREW

OEM PIN

ATTACHED TAPPING SCREW

OEM RUBBER TRIM

【BEFORE PAINTING】

1) Remove OEM side steps according to the Mercedes-Benz manual.

2) Temporarily install WALD Side Steps to the body.

3) Mark the installation positions on the body according to WALD Side Steps.

4) Remove WALD Side Steps, then use drill to make holes according to the marked positions.

※ Make corrosion treatment on the holes.

5) Paint WALD Side Steps according to the picture.

【AFTER PAINTING】

6) Temporarily fix all the pins and tapping screws to install WALD Side Steps to the body.

7) Check all the details of the fitment, then fix them.

8) Install OEM rubber trim to WALD Side Steps.

■HOW TO INSTALL THE ATTACHED MESH (STEP 4)

(From the top)

Use OEM pins to install WALD Side Steps to the body. (STEP 6)

ATTACHED MESH

■WALD SHOWCAR IS PAINTED LIKE THE PICTURE (STEP 5)

Paint here.

ATTENTION

MORE THAN 2 TECHNICIANS ARE NECESSARY IN THIS WORK.

DURING ALL THE INSTALLATION PROCESS, PLEASE BE CAREFUL NOT TO DAMAGE THE BODY.

PLEASE BE CAREFUL NOT TO DAMAGE THE BODY.

MARK THE INSTALLATION POSITIONS BY CHECKING THE FITMENT AND USE DRILL TO MAKE HOLES.

DEGREASE ALL THE INSTALLATION POSITIONS.

AND REMOVE THE BODY PROTECTION COATING BEFORE THE INSTALLATION.

REAR BUMPER

OEM BOLT

OEM NUT

OEM BOLT

ATTACHED TAPPING SCREW

OEM BOLT

ATTACHED TAPPING SCREW

【BEFORE PAINTING】

1) Remove OEM rear bumper according to the Mercedes-Benz service manual.

2) Relocate OEM bumper support to WALD Rear Bumper, then install it to the body.

※ Adjust the details of WALD Rear Bumper to fit the body by rasps or sandpapers.

3) Paint WALD Rear Bumper according to the picture.

【AFTER PAINTING】

4) Use caulking glue to relocate PTS and install the attached mesh to WALD Rear Bumper from the rear.

5) Temporarily fix all the tapping screws, bolts and nuts to install WALD Rear Bumper to the body.

6) Check all the details of the fitment, then fix them.

■HOW TO INSTALL THE ATTACHED MESH (STEP 4)

OEM BUMPER SUPPORT

Make the attached mesh stuck in the pins.

ATTACHED PIN

ATTACHED MESH

WALD REAR BUMPER

■WALD SHOWCAR IS PAINTED LIKE THE PICTURE (STEP 4)

Paint here.

ATTENTION

MORE THAN 2 TECHNICIANS ARE NECESSARY IN THIS WORK.

DURING ALL THE INSTALLATION PROCESS, PLEASE BE CAREFUL NOT TO DAMAGE THE BODY.

PLEASE BE CAREFUL NOT TO DAMAGE THE BODY.

DEGREASE ALL THE INSTALLATION POSITIONS.

AND REMOVE THE BODY PROTECTION COATING BEFORE THE INSTALLATION.