

# Mercedes-AMG GT (2015y~)

WALD SPORTS LINE  
BLACK BISON EDITION

INSTALLATION MANUAL  
**WALD**  
Sportliche Autoausrüstung WALD.International

THANK YOU FOR PURCHASING. THIS IS THE INSTALLATION MANUAL OF WALD FRONT BUMPER FOR MERCEDES-AMG GT.  
PLEASE READ THIS MANUAL CAREFULLY BEFORE THE INSTALLATION.

## ATTENTION



- ※ NO RETURNS CAN BE ACCEPTED BECAUSE OF IMPROPER INSTALLATION OR PAINTING.
- ※ CHECK THE FITMENT, AND ADJUST ALL THE DETAILS BEFORE PAINTING.
- We assume no responsibility for any damage resulting from improper installation, painting, modification and any cut wound in unsealing.
- Contact the car dealer when you have any question in removing OEM parts.
- During all the installation process, use parking brake and stop the engine completely.
- Use rasps or sandpapers to fit the products to the body if there is an individual difference.
- The product is made of FRP. Handle with care. Do not give the excessive force.
- Gradually fix the bolts and nuts by checking the fitment and balance of the installation.
- Check the fitment, and adjust all the details of the fitment steady and proper.
- Please check the fitment and all the details regularly, fix the bolts and nuts as necessary.
- The instruction of painting is just our recommendation, please paint it as you like.
- ※ PLEASE BE AWARE OF:
- You may lose the warranty and all the services from the car maker, because of replacing OEM parts.
- Reduced road clearance may cause inconvenience in using parking curbs and garage jack.
- FRP, ABS and PPE products are slightly weaker than OEM parts in crashes.
- The product may not match the body and OEM color perfectly.


Please purchase double sided tape, primer and caulking glue at auto accessory shop or hardware store.

Completely degrease and paint primer on all the installation positions to enhance the viscosity of double sided tape.  
Use dryer to warm double sided tape to enhance the viscosity in low temperature.  
Keep the car in a dry condition more than 24 hours after gluing.  
Do not wash the car during this time.

	PARTS	QUANTITIES
FRONT BUMPER	FRONT BUMPER	1
	LICENSE PLATE BRACKET	1
	BOLTS & NUTS (M6 x 12)	2 SETS
	RIVETS	2



Use caulking glue to fill the gap between the product and the body.

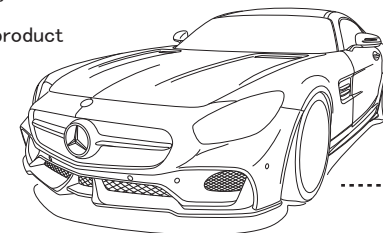

## FRONT BUMPER



### [BEFORE PAINTING]

- 1) Remove OEM front bumper according to the Mercedes-Benz service manual.
  - 2) Temporarily install OEM Inner parts to WALD Front Bumper (As per enclosure) and install to the body.
- ※ Adjust the details of WALD Front Bumper to fit the body by rasps or sandpapers.
  - 3) Make holes according to the cut-lines on WALD Front Bumper for the car equipped PTS.
  - 4) Make holes for the attached license plate bracket to fit with your own license plate.
- ※ Paint the attached license plate bracket to keep it away from corroding.
  - ※ Adjust with the spacers to fit the license plate on WALD Front Bumper.
  - 5) Paint WALD Front Bumper according to the picture.

### [AFTER PAINTING]

- 6) Replace all the necessary OEM parts on WALD Front Bumper.
- 7) Install the attached license plate bracket on WALD Front Bumper.
- 8) Temporarily install WALD Front Bumper to the body.
- 9) Check all the details of the fitment, then fix it tightly with the bolts and tapping screws..

※WALD SHOWCAR IS PAINTED LIKE THE PICTURE (STEP 5)

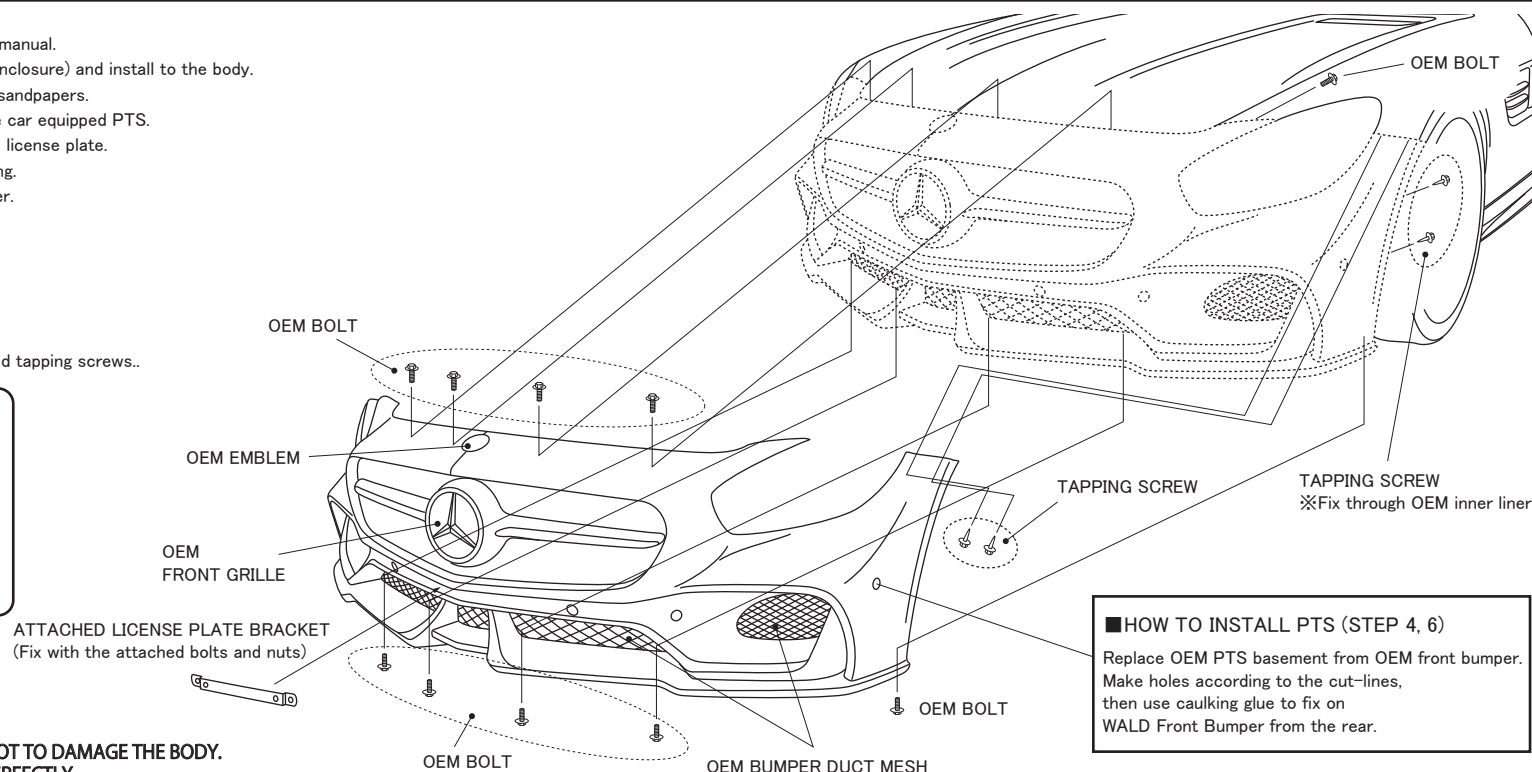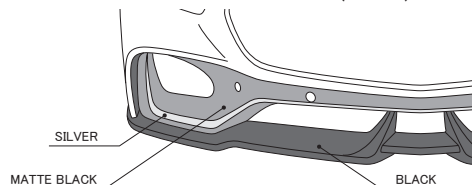

### ■ HOW TO INSTALL PTS (STEP 4, 6)

Replace OEM PTS basement from OEM front bumper. Make holes according to the cut-lines, then use caulking glue to fix on WALD Front Bumper from the rear.



## ATTENTION

- ※ MORE THAN 2 TECHNICIANS ARE NECESSARY IN THIS WORK.
- ※ DURING ALL THE INSTALLATION PROCESS, PLEASE BE CAREFUL NOT TO DAMAGE THE BODY.
- ※ ADJUST ALL THE DETAILS OF OUR PRODUCTS TO FIT ON A CAR PERFECTLY.

# Mercedes-AMG GT (2015y~)

WALD SPORTS LINE  
BLACK BISON EDITION

INSTALLATION MANUAL  
**WALD**  
Sportliche Autoausrüstung WALD International

THANK YOU FOR PURCHASING. THIS IS THE INSTALLATION MANUAL OF WALD FRONT BUMPER FOR MERCEDES-AMG GT.  
PLEASE READ THIS MANUAL CAREFULLY BEFORE THE INSTALLATION.

## HOW TO REPLACE OEM PARTS FOR FRONT BUMPER ①

Use caulking glue  
to fill the gap  
between the product  
and the body.


Please purchase double sided tape,  
primer and caulking glue at  
auto accessory shop or  
hardware store.

Completely degrease and paint primer on all  
the installation positions to enhance the viscosity  
of double sided tape.


Use dryer to warm double sided tape to enhance  
the viscosity in low temperature.

Keep the car in a dry condition more than  
24 hours after gluing.

Do not wash the car during this time.

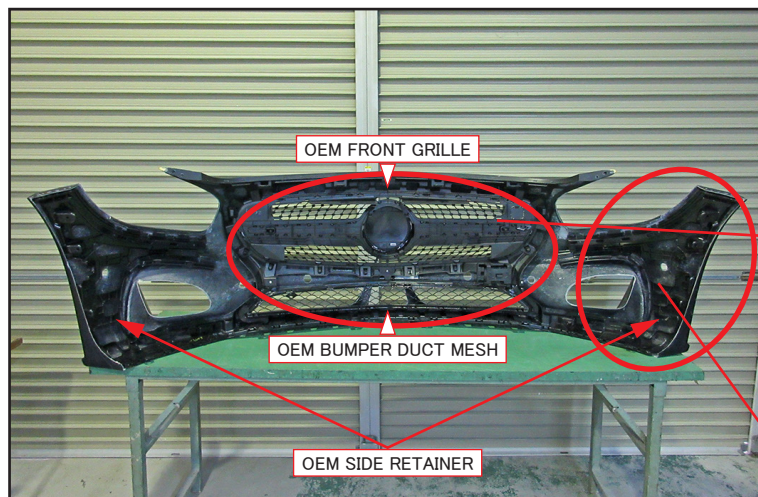

The Above Picture : Already Installed OEM parts on WALD Front Bumper (Inside).

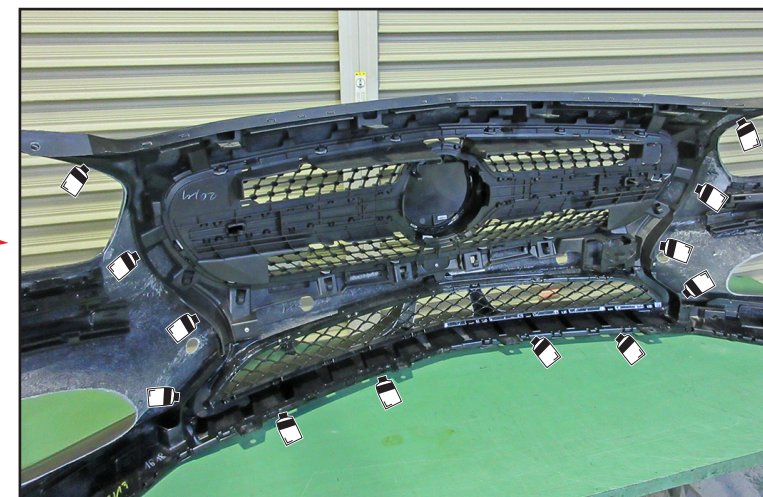

The Above Picture : Center Part of WALD Front Bumper (Inside).  
Use caulking glue to fix them on WALD Front Bumper.



The Above Picture : Side Part of WALD Front Bumper (Inside).  
Use caulking glue to fix OEM brackets on both side.  
Red Circled : Fix OEM Side Retainer with the attached rivets.



# Mercedes-AMG GT (2015y~)

WALD SPORTS LINE  
BLACK BISON EDITION

INSTALLATION MANUAL  
**WALD**  
Sportliche Autoausrüstung WALD International

THANK YOU FOR PURCHASING. THIS IS THE INSTALLATION MANUAL OF WALD FRONT BUMPER FOR MERCEDES-AMG GT.  
PLEASE READ THIS MANUAL CAREFULLY BEFORE THE INSTALLATION.

## HOW TO REPLACE OEM PARTS FOR FRONT BUMPER 2②



Use caulking glue  
to fill the gap  
between the product  
and the body.

Please purchase double sided tape,  
primer and caulking glue at  
auto accessory shop or  
hardware store.

Completely degrease and paint primer on all  
the installation positions to enhance the viscosity  
of double sided tape.


Use dryer to warm double sided tape to enhance  
the viscosity in low temperature.

Keep the car in a dry condition more than  
24 hours after gluing.


Do not wash the car during this time.



The Above Picture : OEM Side Bumper Duct Mesh  
Separate the Mesh from the frame.

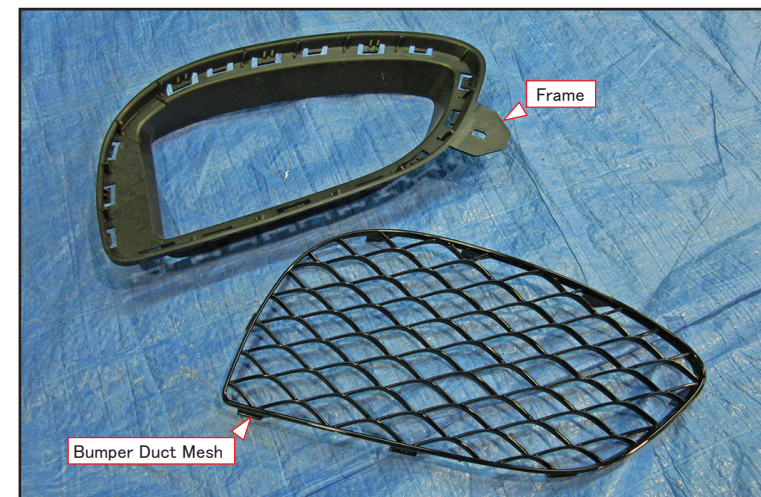

The Above Picture : Separated the Mesh from the Frame (Take off all the nails).

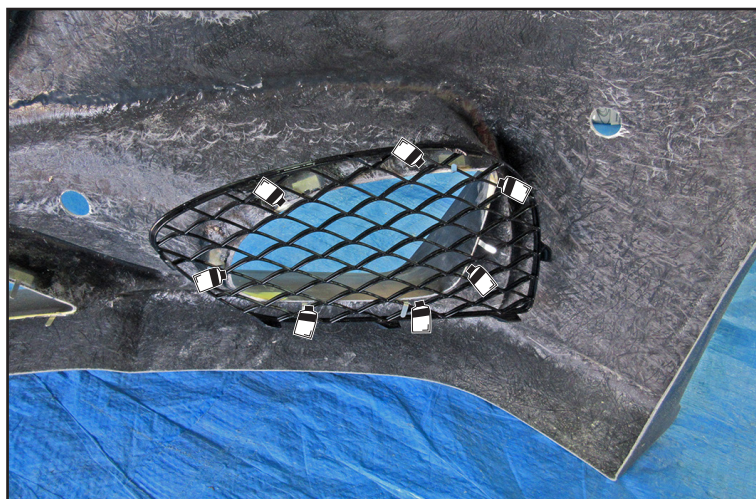

Hook OEM Bumper Duct Mesh with the attached nails on WALD Front Bumper.  
Then use caulking glue to fix them tightly.

# Mercedes-AMG GT (2015y~)

WALD SPORTS LINE  
BLACK BISON EDITION

INSTALLATION MANUAL  
**WALD**  
Sportliche Autoausrüstung WALD International

THANK YOU FOR PURCHASING. THIS IS THE INSTALLATION MANUAL OF WALD SIDE STEPS FOR MERCEDES-AMG GT.  
PLEASE READ THIS MANUAL CAREFULLY BEFORE THE INSTALLATION.

## ATTENTION



- ※ NO RETURNS CAN BE ACCEPTED BECAUSE OF IMPROPER INSTALLATION OR PAINTING.
- ※ CHECK THE FITMENT, AND ADJUST ALL THE DETAILS BEFORE PAINTING.
- We assume no responsibility for any damage resulting from improper installation, painting, modification and any cut wound in unsealing.
- Contact the car dealer when you have any question in removing OEM parts.
- During all the installation process, use parking brake and stop the engine completely.
- Use rasps or sandpapers to fit the products to the body if there is an individual difference.
- The product is made of FRP. Handle with care. Do not give the excessive force.
- Gradually fix the bolts and nuts by checking the fitment and balance of the installation.
- Check the fitment, and adjust all the details of the fitment steady and proper.
- Please check the fitment and all the details regularly, fix the bolts and nuts as necessary.
- The instruction of painting is just our recommendation, please paint it as you like.
- ※ PLEASE BE AWARE OF:
- You may lose the warranty and all the services from the car maker, because of replacing OEM parts.
- Reduced road clearance may cause inconvenience in using parking curbs and garage jack.
- FRP, ABS and PPE products are slightly weaker than OEM parts in crashes.
- The product may not match the body and OEM color perfectly.


Please purchase double sided tape, primer and caulking glue at auto accessory shop or hardware store.

Completely degrease and paint primer on all the installation positions to enhance the viscosity of double sided tape.  
Use dryer to warm double sided tape to enhance the viscosity in low temperature.  
Keep the car in a dry condition more than 24 hours after gluing.  
Do not wash the car during this time.

	PARTS	QUANTITIES
SIDE STEP	SIDE STEPS	1 SET
	FRONT BRACKET (65 x 20)	2
	REAR BRACKET (57 x 20)	2
	BOLT & NUT (M5 x 15)	4 SETS



Use caulking glue to fill the gap between the product and the body.

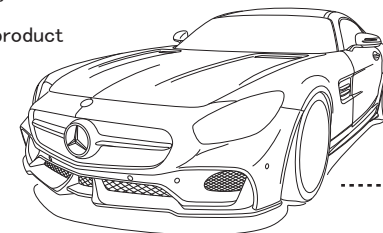

## SIDE STEP


### 【BEFORE PAINTING】

- 1) Remove OEM side steps according to the Mercedes-Benz service manual.
- 2) Replace OEM retainer after cutting off the unnecessary part (As per enclosure).
- 3) Fix the attached brackets on WALD Side Steps, then temporarily install WALD Side Steps to the body.
- ※ Adjust the details of WALD Sides Steps to fit the body by rasps or sandpapers.
- 4) Check the balance of the location on the body.
- 5) Take off from the body, and paint them according to the picture.

### 【AFTER PAINTING】


- 6) Completely degrease the installation position.
- 7) Use caulking glue to fix OEM retainers on WALD Side Steps.
- 8) Fix the attached brackets on WALD Side Steps.
- 9) Use caulking glue to install WALD Side Steps to the body, then fix the attached bolts and nuts tightly.
- 10) Leave them till completely fixed.

※WALD SHOWCAR IS PAINTED LIKE THE PICTURE (STEP 5)

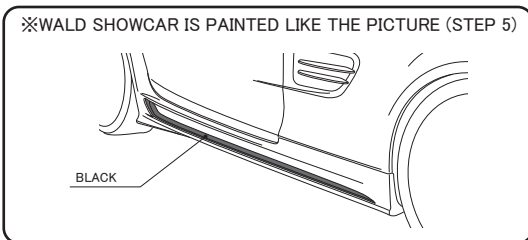

## ATTENTION

- ※ MORE THAN 2 TECHNICIANS ARE NECESSARY IN THIS WORK.
- ※ DURING ALL THE INSTALLATION PROCESS, PLEASE BE CAREFUL NOT TO DAMAGE THE BODY.
- ※ ADJUST ALL THE DETAILS OF OUR PRODUCTS TO FIT ON A CAR PERFECTLY.

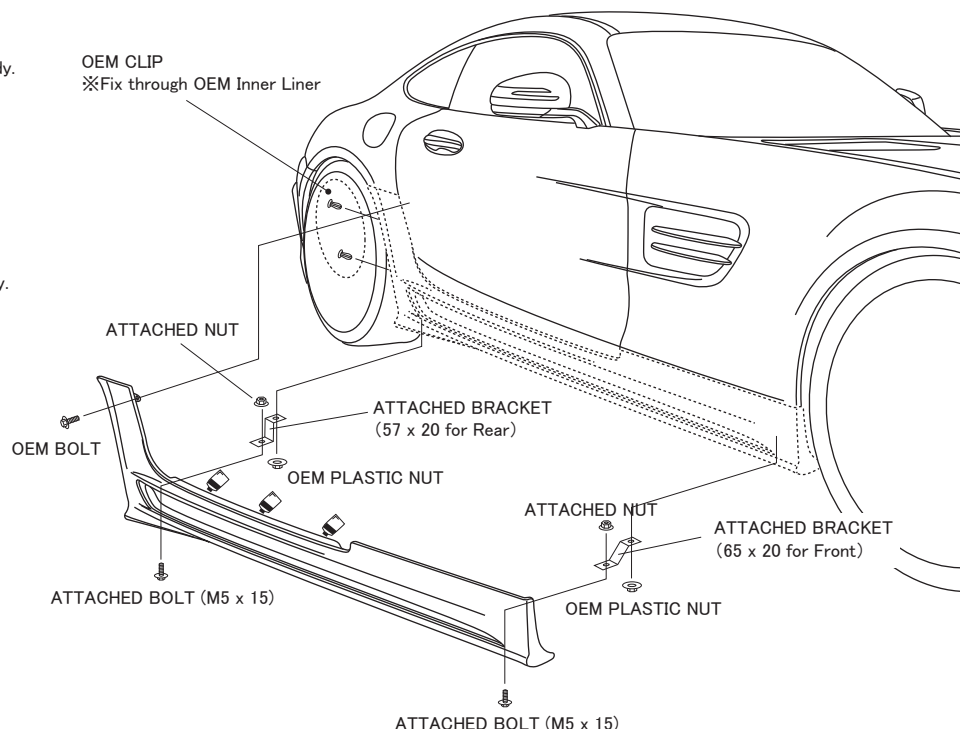

WALD INTERNATIONAL



# Mercedes-AMG GT (2015y~)

WALD SPORTS LINE  
BLACK BISON EDITION

INSTALLATION MANUAL  
**WALD**  
Sportliche Autoausrüstung WALD.International

THANK YOU FOR PURCHASING. THIS IS THE INSTALLATION MANUAL OF WALD SIDE STEPS FOR MERCEDES-AMG GT.  
PLEASE READ THIS MANUAL CAREFULLY BEFORE THE INSTALLATION.

## HOW TO REPLACE OEM PARTS FOR SIDE STEPS ①



Use caulking glue  
to fill the gap  
between the product  
and the body.


Please purchase double sided tape,  
primer and caulking glue at  
auto accessory shop or  
hardware store.

Completely degrease and paint primer on all  
the installation positions to enhance the viscosity  
of double sided tape.

Use dryer to warm double sided tape to enhance  
the viscosity in low temperature.

Keep the car in a dry condition more than  
24 hours after gluing.

Do not wash the car during this time.

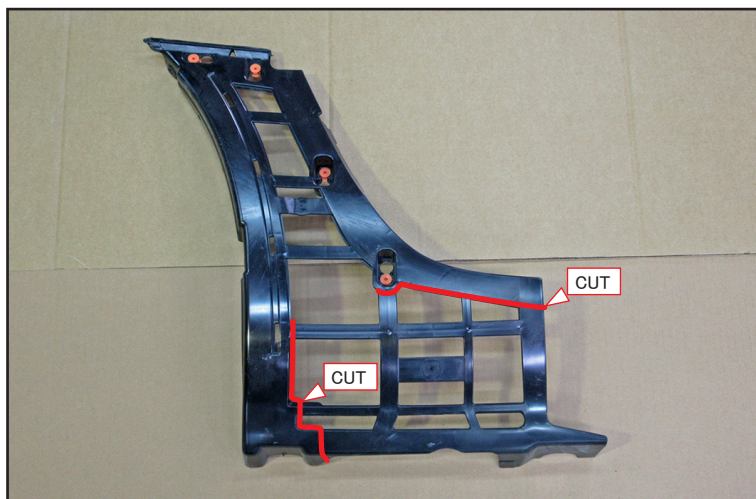

Cut OEM retainers according to the picture.



The Above Picture : Already Cut the unnecessary part for the installation.



Use caulking glue to fix OEM retainers on WALD Side Steps.

# Mercedes-AMG GT (2015y~)

WALD SPORTS LINE  
BLACK BISON EDITION

INSTALLATION MANUAL  
**WALD**  
Sportliche Autoausrüstung WALD.International

THANK YOU FOR PURCHASING. THIS IS THE INSTALLATION MANUAL OF WALD REAR BUMPER FOR MERCEDES-AMG GT.  
PLEASE READ THIS MANUAL CAREFULLY BEFORE THE INSTALLATION.

## ATTENTION



- ※ NO RETURNS CAN BE ACCEPTED BECAUSE OF IMPROPER INSTALLATION OR PAINTING.
- ※ CHECK THE FITMENT, AND ADJUST ALL THE DETAILS BEFORE PAINTING.
- We assume no responsibility for any damage resulting from improper installation, painting, modification and any cut wound in unsealing.
- Contact the car dealer when you have any question in removing OEM parts.
- During all the installation process, use parking brake and stop the engine completely.
- Use rasps or sandpapers to fit the products to the body if there is an individual difference.
- The product is made of FRP. Handle with care. Do not give the excessive force.
- Gradually fix the bolts and nuts by checking the fitment and balance of the installation.
- Check the fitment, and adjust all the details of the fitment steady and proper.
- Please check the fitment and all the details regularly, fix the bolts and nuts as necessary.
- The instruction of painting is just our recommendation, please paint it as you like.
- ※ PLEASE BE AWARE OF:
- You may lose the warranty and all the services from the car maker, because of replacing OEM parts.
- Reduced road clearance may cause inconvenience in using parking curbs and garage jack.
- FRP, ABS and PPE products are slightly weaker than OEM parts in crashes.
- The product may not match the body and OEM color perfectly.


Please purchase double sided tape, primer and caulking glue at auto accessory shop or hardware store.

Completely degrease and paint primer on all the installation positions to enhance the viscosity of double sided tape.  
Use dryer to warm double sided tape to enhance the viscosity in low temperature.  
Keep the car in a dry condition more than 24 hours after gluing.  
Do not wash the car during this time.

	PARTS	QUANTITIES
REAR BUMPER	REAR BUMPER	1
	MESHERS	1 SET
	BRACKETS	2
	BOLT & NUT (M5 x 15)	4 SETS
	BOLTS (M5 x 15) for Muffler Cutter	2
	NUTS (M4) for LED Stop Lamp	2



Use caulking glue to fill the gap between the product and the body.

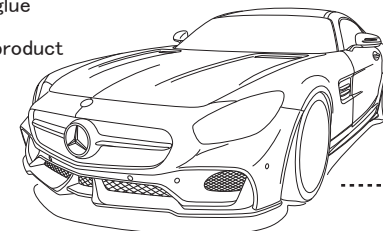

## REAR BUMPER

### 【BEFORE PAINTING】

- 1) Remove OEM rear bumper according to the Mercedes-Benz service manual.
- 2) Replace OEM muffler cutter to WALD Rear Bumper (As per enclosure).
- 3) Temporarily fix the attached brackets and install WALD Rear Bumper to the body.
- ※ Adjust the details of WALD Rear Bumper to fit the body by rasps or sandpapers. (As per enclosures)
- 4) Make holes along the cutting line on WALD Rear Bumper for the car equipping PTS.
- 5) Paint WALD Rear Bumper according to the picture.



### 【AFTER PAINTING】

- 6) Use pins and caulking glue to install the attached meshes to WALD Rear Bumper from the rear.
- 7) Replace all the necessary parts to WALD Rear Bumper, then temporarily install to the body.
- 8) Check all the details of the fitment, then fix them tightly.

※WALD SHOWCAR IS PAINTED LIKE THE PICTURE (STEP 5)

■HOW TO INSTALL THE ATTACHED MESHERS (STEP 6)

Use pins and caulking glue to install the attached meshes to WALD Rear Bumper from the rear.  
※Paint the inside of the ducts and pins in black.

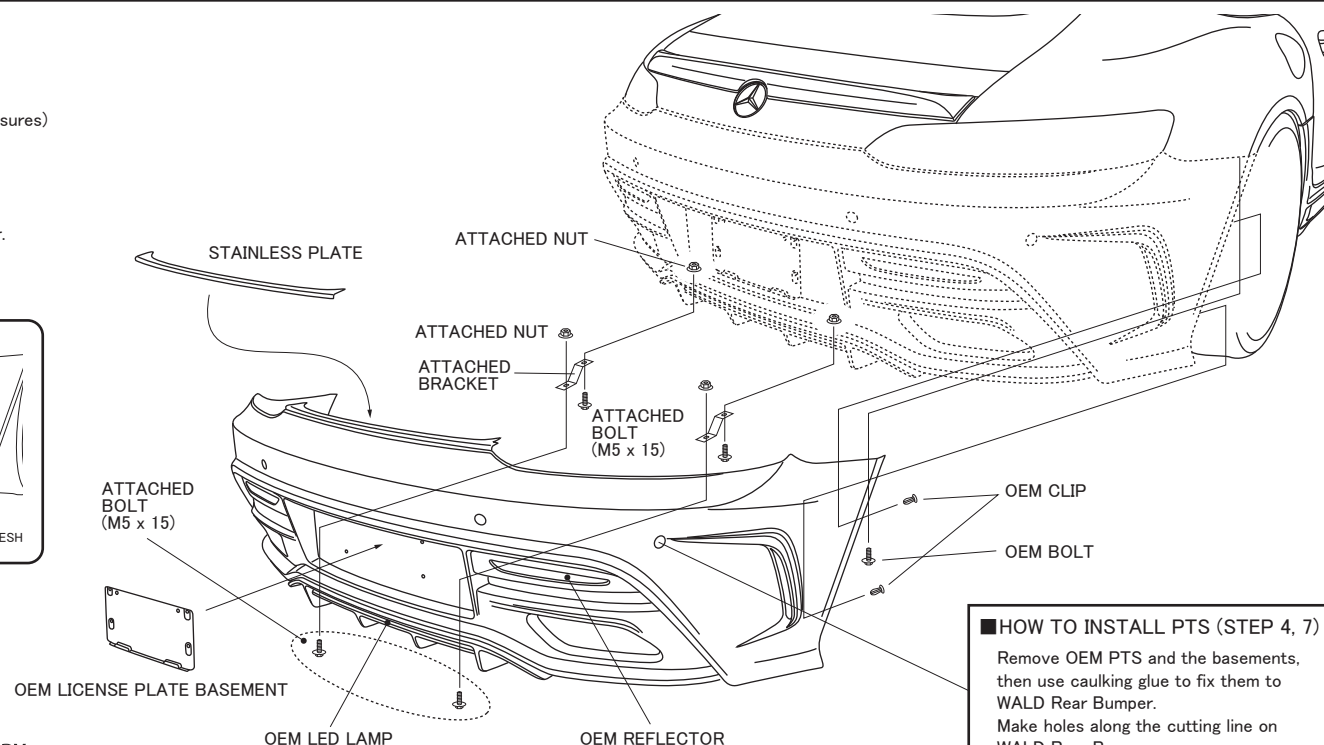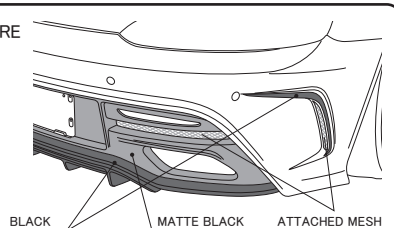

### ■HOW TO INSTALL PTS (STEP 4, 7)

Remove OEM PTS and the basements, then use caulking glue to fix them to WALD Rear Bumper.  
Make holes along the cutting line on WALD Rear Bumper.



## ATTENTION

- ※ MORE THAN 2 TECHNICIANS ARE NECESSARY IN THIS WORK.
- ※ DURING ALL THE INSTALLATION PROCESS, PLEASE BE CAREFUL NOT TO DAMAGE THE BODY.
- ※ ADJUST ALL THE DETAILS OF OUR PRODUCTS TO FIT ON A CAR PERFECTLY.



# Mercedes-AMG GT (2015y~)

WALD SPORTS LINE  
BLACK BISON EDITION

INSTALLATION MANUAL  
**WALD**  
Sportliche Autoausrüstung WALD.International

THANK YOU FOR PURCHASING. THIS IS THE INSTALLATION MANUAL OF WALD REAR BUMPER FOR MERCEDES-AMG GT.  
PLEASE READ THIS MANUAL CAREFULLY BEFORE THE INSTALLATION.

## HOW TO REPLACE OEM PARTS FOR REAR BUMPER ①

Use caulking glue  
to fill the gap  
between the product  
and the body.


Please purchase double sided tape,  
primer and caulking glue at  
auto accessory shop or  
hardware store.

Completely degrease and paint primer on all  
the installation positions to enhance the viscosity  
of double sided tape.


Use dryer to warm double sided tape to enhance  
the viscosity in low temperature.

Keep the car in a dry condition more than  
24 hours after gluing.

Do not wash the car during this time.

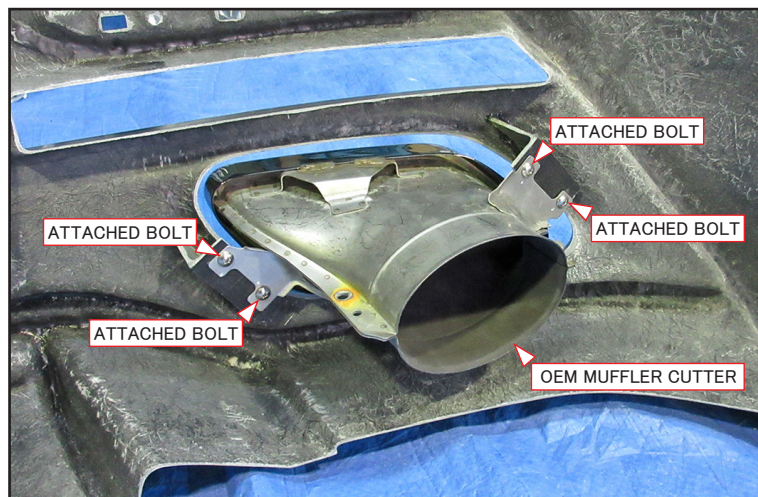


Fix OEM muffler cutter to the flange with rivet nuts on WALD Rear Bumper.  
※Adjust the location of OEM muffler cutter.

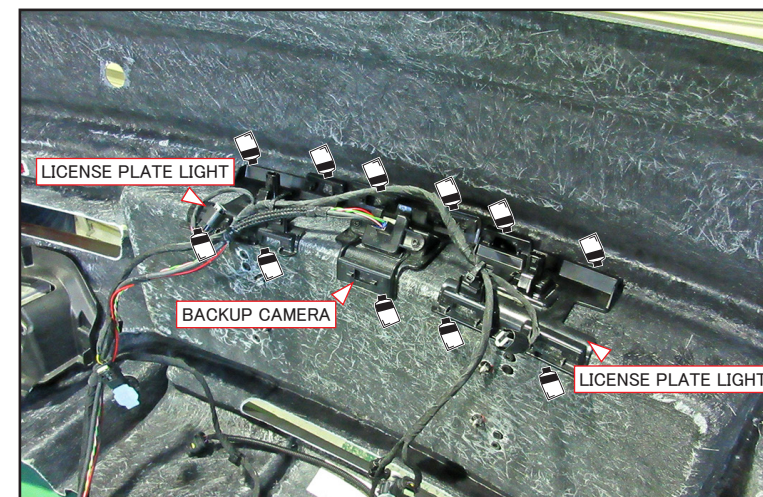

Use caulking glue to replace OEM license plate lights and backup camera on WALD Rear Bumper.



Use OEM tapping screws to fix OEM reflectors in the same way for OEM rear bumper.  
※Recommendation : Use caulking glue to fix the nails for prevention of falling.

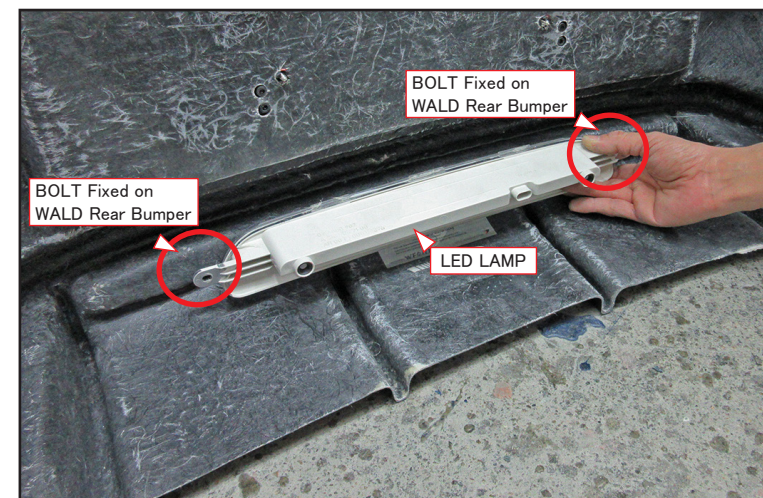

Fix OEM LED lamp with the attached bolts and nuts on WALD Rear Bumper.  
※No bolts on the above picture, but the real product has 2 bolts at the red-circled locations.

# Mercedes-AMG GT (2015y~)

WALD SPORTS LINE  
BLACK BISON EDITION

INSTALLATION MANUAL  
**WALD**  
Sportliche Autoausrüstung WALD.International

THANK YOU FOR PURCHASING. THIS IS THE INSTALLATION MANUAL OF WALD TRUNK SPOILER FOR MERCEDES-AMG GT.  
PLEASE READ THIS MANUAL CAREFULLY BEFORE THE INSTALLATION.

## ATTENTION




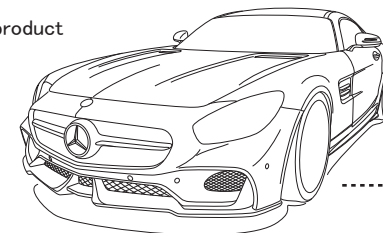
- ※ NO RETURNS CAN BE ACCEPTED BECAUSE OF IMPROPER INSTALLATION OR PAINTING.
- ※ CHECK THE FITMENT, AND ADJUST ALL THE DETAILS BEFORE PAINTING.
- We assume no responsibility for any damage resulting from improper installation, painting, modification and any cut wound in unsealing.
- Contact the car dealer when you have any question in removing OEM parts.
- During all the installation process, use parking brake and stop the engine completely.
- Use rasps or sandpapers to fit the products to the body if there is an individual difference.
- The product is made of FRP. Handle with care. Do not give the excessive force.
- Gradually fix the bolts and nuts by checking the fitment and balance of the installation.
- Check the fitment, and adjust all the details of the fitment steady and proper.
- Please check the fitment and all the details regularly, fix the bolts and nuts as necessary.
- The instruction of painting is just our recommendation, please paint it as you like.
- ※ PLEASE BE AWARE OF:
- You may lose the warranty and all the services from the car maker, because of replacing OEM parts.
- Reduced road clearance may cause inconvenience in using parking curbs and garage jack.
- FRP, ABS and PPE products are slightly weaker than OEM parts in crashes.
- The product may not match the body and OEM color perfectly.

Please purchase double sided tape, primer and caulking glue at auto accessory shop or hardware store.

Completely degrease and paint primer on all the installation positions to enhance the viscosity of double sided tape.  
Use dryer to warm double sided tape to enhance the viscosity in low temperature.  
Keep the car in a dry condition more than 24 hours after gluing.  
Do not wash the car during this time.

	PARTS	QUANTITIES
TRUNK SPOILER	TRUNK SPOILER	1

 Use caulking glue to fill the gap between the product and the body.





## TRUNK SPOILER

### 【BEFORE PAINTING】

- 1) Temporarily install WALD Trunk Spoiler to the body.
- 2) Check the fitment, then use masking tape to mark the installation position.

### 【AFTER PAINTING】

- 3) Completely degrease the installation position.
- 4) Use caulking glue to install WALD Trunk Spoiler to the body according to the marked position.
- 5) Check all the details of the fitment, and leave it till completely fixed.

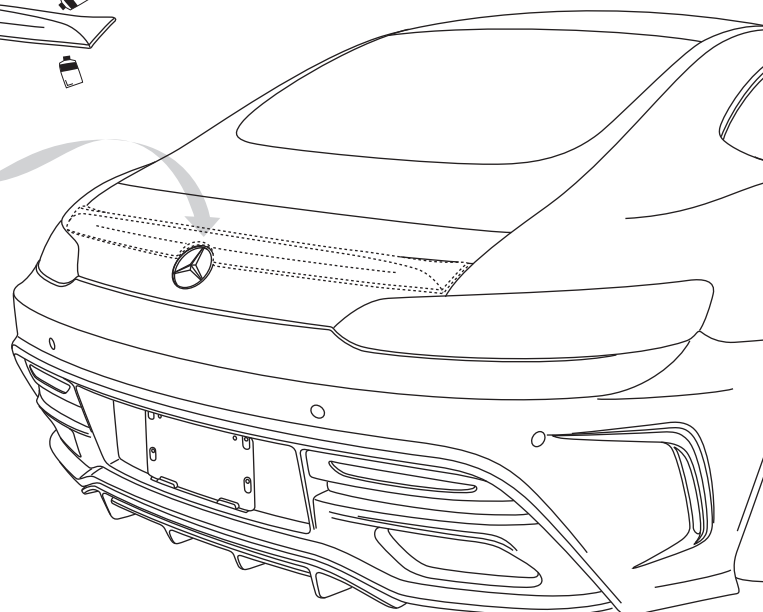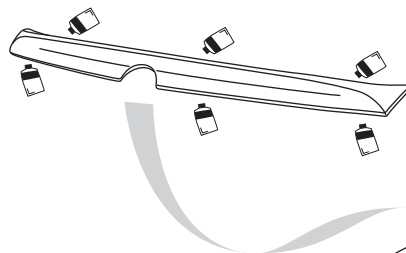

## ATTENTION

- ※ MORE THAN 2 TECHNICIANS ARE NECESSARY IN THIS WORK.
- ※ DURING ALL THE INSTALLATION PROCESS, PLEASE BE CAREFUL NOT TO DAMAGE THE BODY.
- ※ DEGREASE ALL THE INSTALLATION POSITION, AND REMOVE THE BODY PROTECTION COATING BEFORE THE INSTALLATION.



WALD.INTERNAIONAL

WALD. INTERNATIONAL

ADD: 10-13 KYOGUCHI-CHO, TAKATSUKI, OSAKA, JAPAN ZIP: 569-0072 TEL: (81)-72-673-3000 FAX: (81)-72-673-3003

WALD.INTERNAIONAL



# Mercedes-AMG GT (2015y~)

WALD SPORTS LINE  
BLACK BISON EDITION

INSTALLATION MANUAL  
**WALD**  
Sportliche Autoausrüstung WALD International

THANK YOU FOR PURCHASING. THIS IS THE INSTALLATION MANUAL OF WALD CANARD FOR MERCEDES-AMG GT.  
PLEASE READ THIS MANUAL CAREFULLY BEFORE THE INSTALLATION.

## ATTENTION



- ※ NO RETURNS CAN BE ACCEPTED BECAUSE OF IMPROPER INSTALLATION OR PAINTING.
- ※ CHECK THE FITMENT, AND ADJUST ALL THE DETAILS BEFORE PAINTING.
- We assume no responsibility for any damage resulting from improper installation, painting, modification and any cut wound in unsealing.
- Contact the car dealer when you have any question in removing OEM parts.
- During all the installation process, use parking brake and stop the engine completely.
- Use rasps or sandpapers to fit the products to the body if there is an individual difference.
- The product is made of FRP. Handle with care. Do not give the excessive force. Gradually fix the bolts and nuts by checking the fitment and balance of the installation.
- Check the fitment, and adjust all the details of the fitment steady and proper. Please check the fitment and all the details regularly, fix the bolts and nuts as necessary.
- The instruction of painting is just our recommendation, please paint it as you like.
- ※ PLEASE BE AWARE OF:
- You may lose the warranty and all the services from the car maker, because of replacing OEM parts.
- Reduced road clearance may cause inconvenience in using parking curbs and garage jack.
- FRP, ABS and PPE products are slightly weaker than OEM parts in crashes.
- The product may not match the body and OEM color perfectly.

Please purchase double sided tape, primer and caulking glue at auto accessory shop or hardware store.

Completely degrease and paint primer on all the installation positions to enhance the viscosity of double sided tape.

Use dryer to warm double sided tape to enhance the viscosity in low temperature.


Keep the car in a dry condition more than 24 hours after gluing.

Do not wash the car during this time.

	PARTS	QUANTITIES
CANARD	CANARD	1 SET
	BOLT & NUT & WASHER (M4 x 16)	8 SETS
	SPACER	8
	PATTERN for Location	1



Use caulking glue to fill the gap between the product and the body.

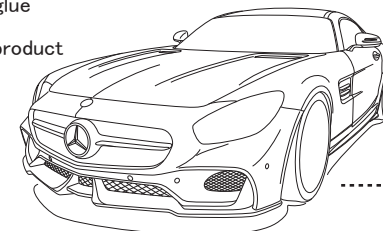

## CANARD


### 【BEFORE PAINTING】

- 1) Tape the attached pattern on WALD Front Bumper after cutting out.
- ※ Recommendation : Take off WALD Front Bumper from the body for the installation.
- 2) Mark the locations for the installation positions of the attached bolts according to the attached pattern on the body.
- 3) Make the holes on the marked positions after taking off WALD Canard from the body.
- ※ Diameter of a Hole : About 4.5 mm
- 4) Paint WALD Canard according to the picture.

### 【AFTER PAINTING】

- 5) Fix WALD Canard on WALD Front Bumper with the attached bolts.
- 6) Check all the details of the fitment, then install WALD Front Bumper to the body.

※WALD SHOWCAR IS PAINTED LIKE THE PICTURE (STEP 4)

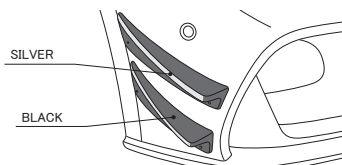

## ATTENTION

- ※ MORE THAN 2 TECHNICIANS ARE NECESSARY IN THIS WORK.
- ※ DURING ALL THE INSTALLATION PROCESS, PLEASE BE CAREFUL NOT TO DAMAGE THE BODY.
- ※ DEGREASE ALL THE INSTALLATION POSITION, AND REMOVE THE BODY PROTECTION COATING BEFORE THE INSTALLATION.

ATTACHED SPACER

ATTACHED BOLT  
(M4 x 16)

※ Use the attached washers and nuts from the inside of WALD Front Bumper.



# Mercedes-AMG GT (2015y~)



THANK YOU FOR PURCHASING. THIS IS THE INSTALLATION MANUAL OF WALD CANARD FOR MERCEDES-AMG GT.  
PLEASE READ THIS MANUAL CAREFULLY BEFORE THE INSTALLATION.

【WORK PROCEDURE】

- 1) Cut out the gray part (Location Sample for Canard).
- 2) Based on the picture, put the location samples on WALD Front Bumper.
- 3) Reffer to the Installation manual of WALD Canard, install them on WALD Front Bumper.

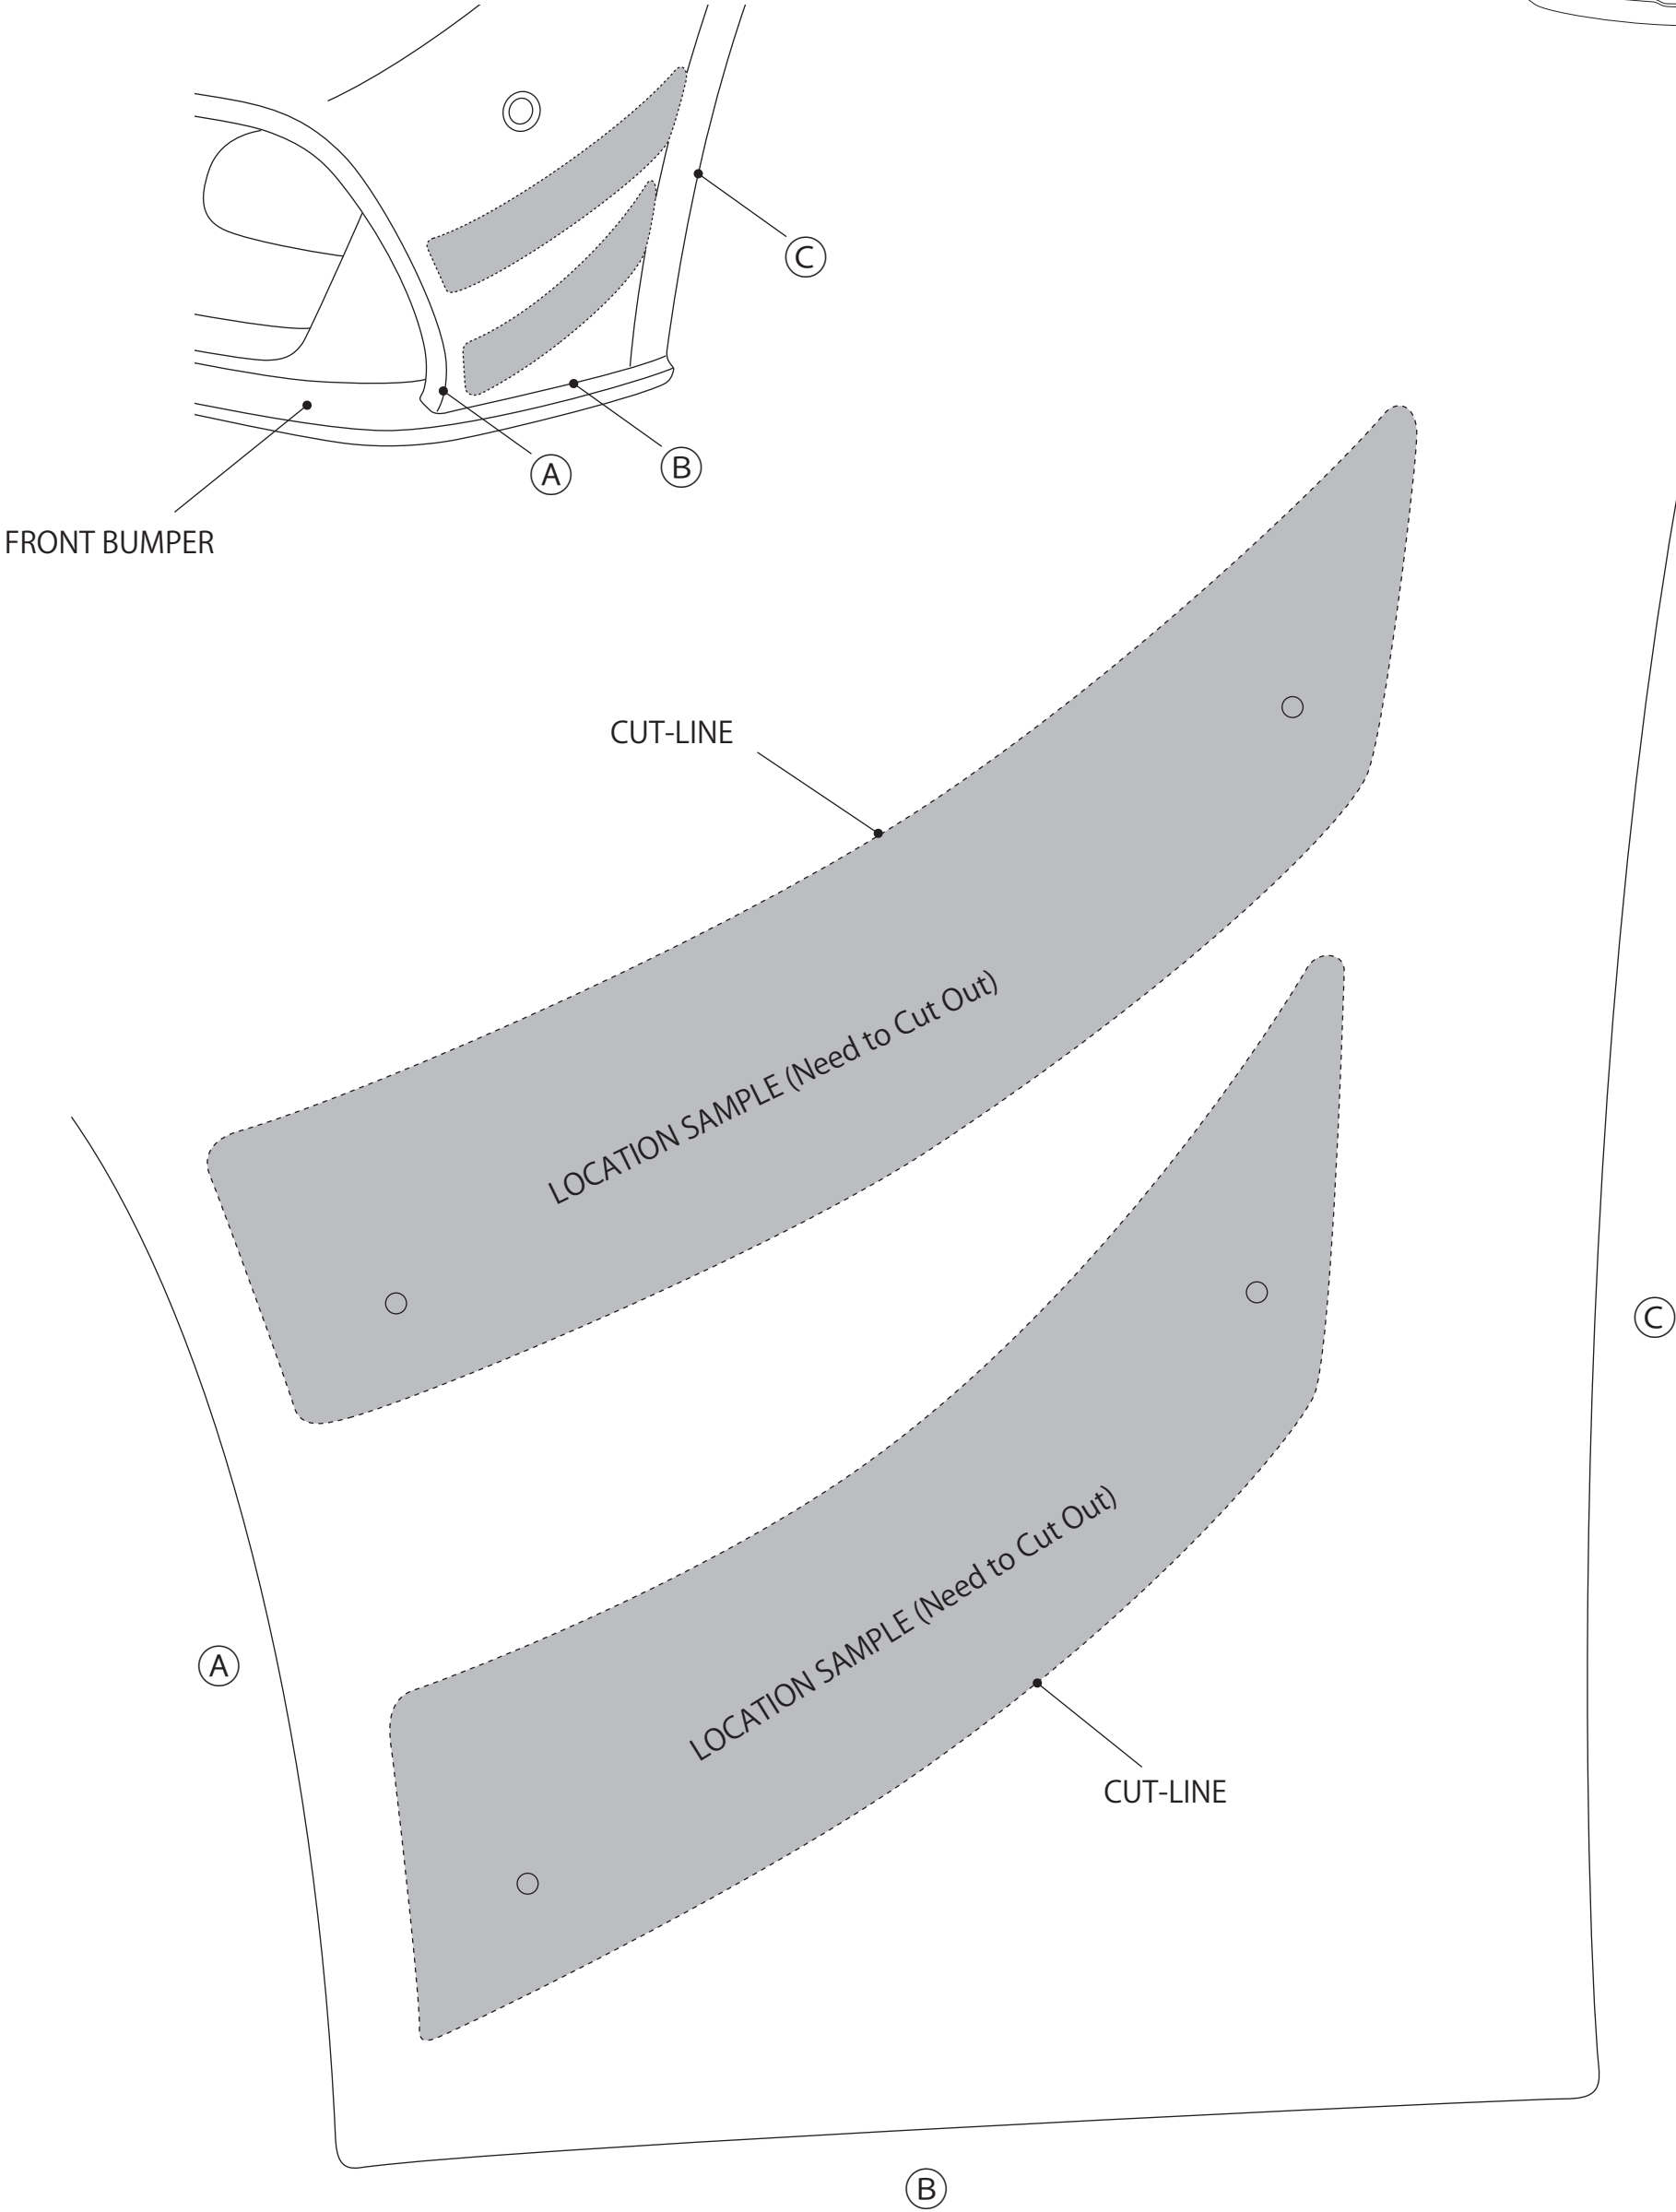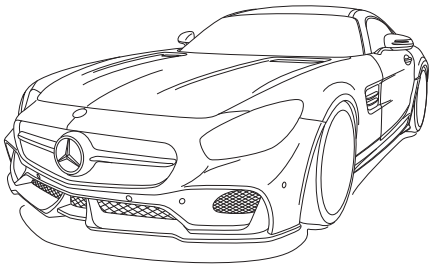

※Copy this location sample inverted to right and left.